


## GABION BENCH TOP ATTACHMENTS

### Using Different Methods

#### How to

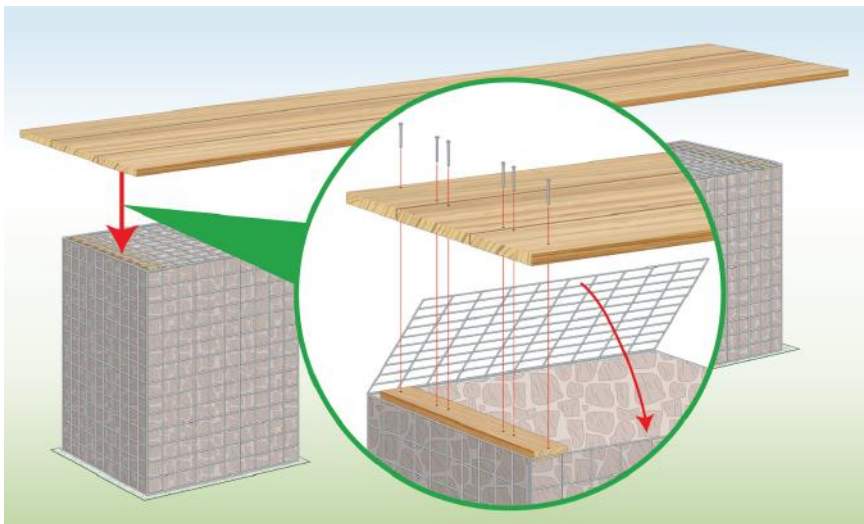


#### Instructions

##### With Screws

Place wooden planks on top of the gabion fill.

Close down the lid and secure it to the gabion.

Place the wooden top on the lid and screw it to the wooden planks beneath the wire.

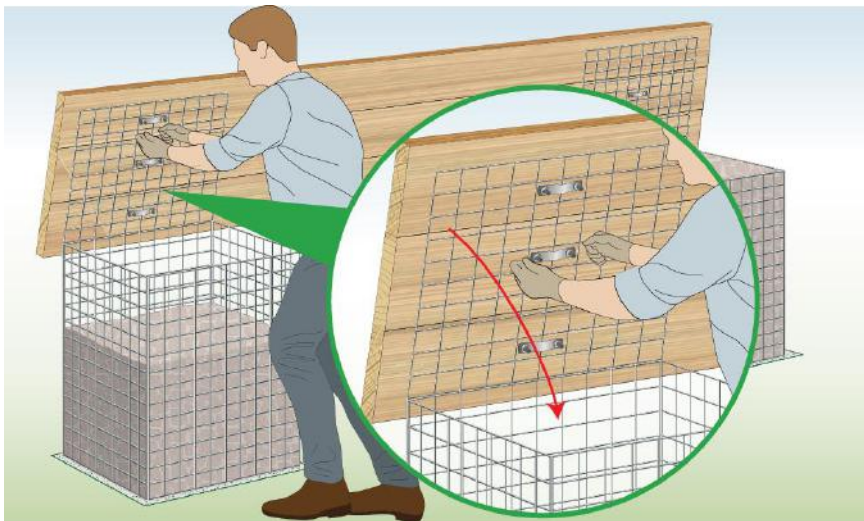


##### With Pipe Clamps

Take a couple of pipe clamps and hammer them flat. Lift the lid panel and put the wooden top behind it.

Drill the holes, push a bolt through each of them and slide the clamp onto the bolts.

Secure the end of the bolts with nuts and close down the lid with tying wire.

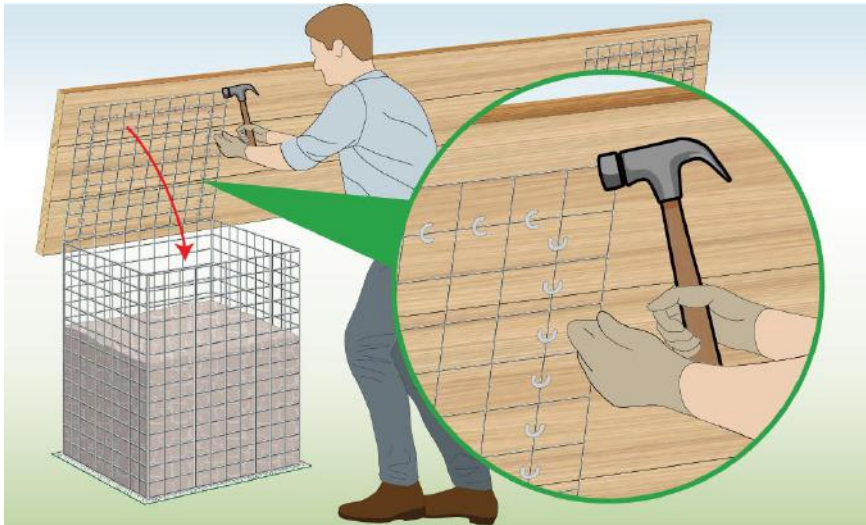

### With Staples / U-Nails

Lift the lid of the gabion and place the wooden top behind it.

Take a couple of U-nails and hammer them through the mesh and into the top so that it holds it in place.

Make sure the nails are not longer than the thickness of the wooden top. Close down the lid with tying wire.