



How to assemble a gabion

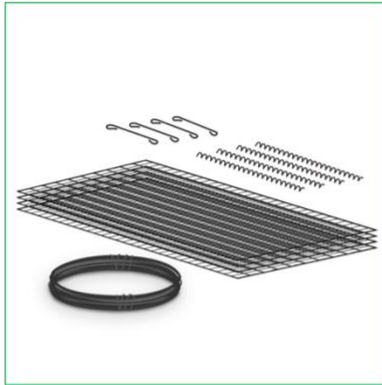

STEP 1:
The gabion basket is delivered flat packed with lacing wire.


If you ordered helicals or corner ties these will also be included.

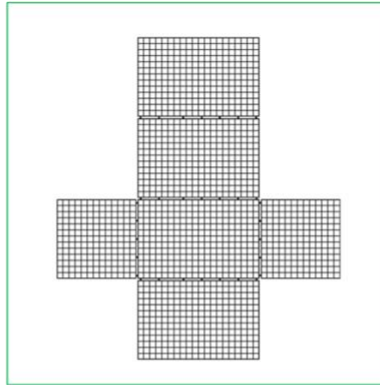

STEP 2:
Unfold the gabion and lie it flat on the ground.

The base is pre-clipped to all 4 sides.


The lid is clipped to the back panel.

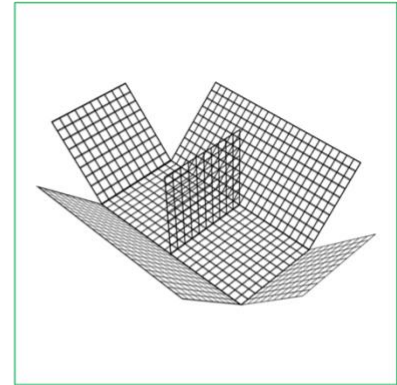

STEP 3:
Fold the 4 side panels up from the base.

If using a rectangular gabion, do the same with the central panel.


Ensure the lid is falling backwards and resting outside of the basket.

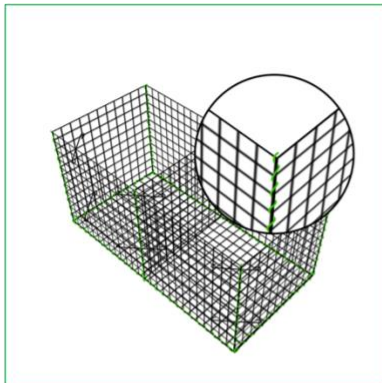

STEP 4:
Join the corners together using lacing wire.* Start at the top and weave down the join, before lacing back upwards towards you. Cut the wire off at the top and secure.

Reinforce each corner with the corner ties for additional support.


* You can also use helicals here for faster application.

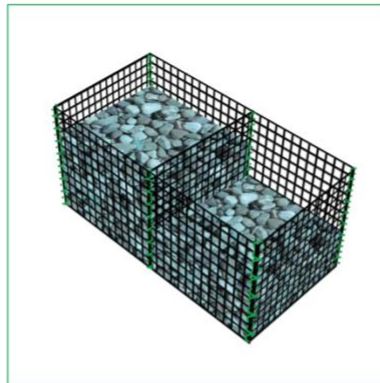

STEP 5:
Fill the gabion with hard, durable and nondegradable rocks or stones that are bigger than the mesh aperture (100mm – 200mm is recommended).

Pack tightly to minimise any voids.

Angular stones are recommended for this.

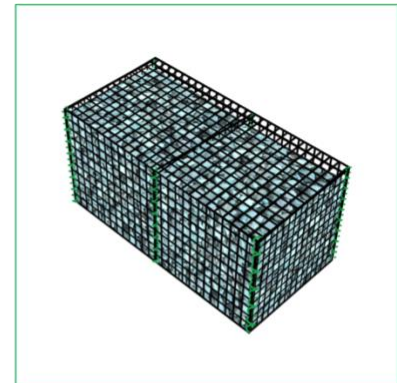

STEP 6:
Close lid ensuring that it sits comfortably on the stones and that there are no voids.

Secure the top around the edges with the lacing wire.

We hope you found this quick guide useful.

If you have any questions relating to [gabions](#), or any other product on the website, get in touch:

Email us: info@wirefence.co.uk

Call us: 0300 124 3556

Visit us: www.wirefence.co.uk