


MEASURING INSTRUCTIONS FOR A CURVED GABION WALL

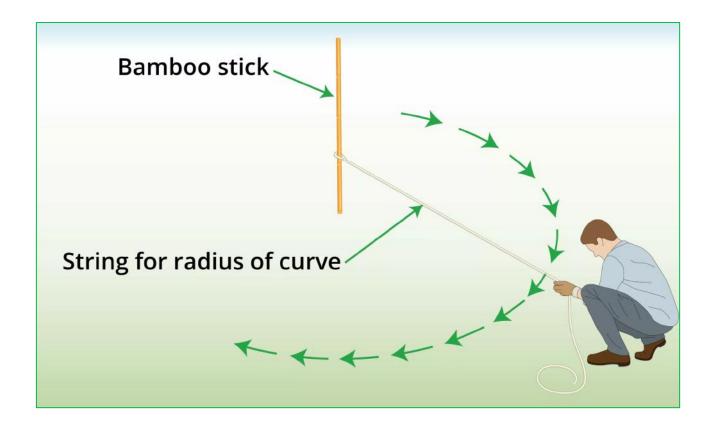


THINGS YOU'LL NEED

- Stick
- Rocks
- String
- Measuring Tape

WireFence

INSTRUCTIONS

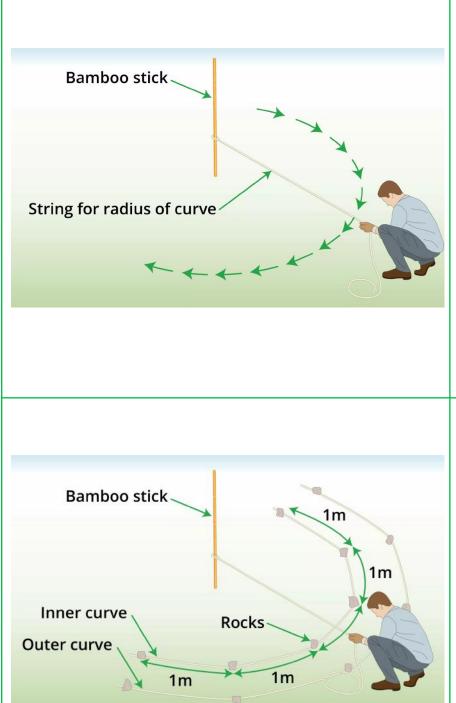

Step 1: Walk the Curve

Attach string to a bamboo stick. Pull the string taut, then walk the string along the area where you would like to create a curved gabion wall.

Step 2: Mark the Curve Using String

Place string along the curve where you plan to install the wall. The string should be placed on the ground and used to mark the inner and outer sides. Hold the string in place at every 1 meter distance using rocks.

WireFence

