## **HOW TO MAKE A DIY Round Gabion Planter** What You'll Need:

## 3mm gabion panels Helicals

- Corner ties or
  - Protective gloves
- Wire cutter tying wire Geotextile Tape measure
- Compost
- **Plan Design**
- Distance between panels:

and available space.

Stone


Plant

- Same height

Plan your design considering plant size

Note that panels will need to be overlap when joined, losing about 22.5cm of

**Connect Inner Panels** 

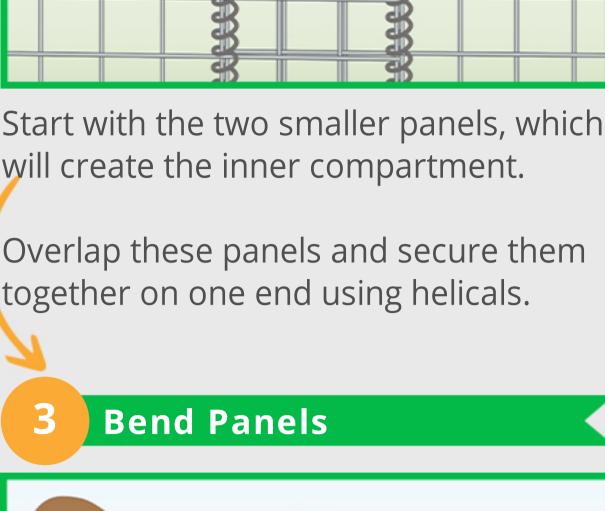




**Cut off Excess** 

Overlap the ends on the loose side as

well and secure them with helicals.

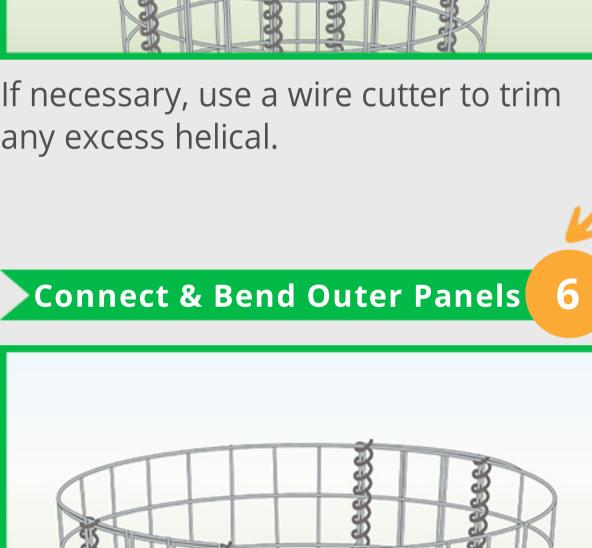

Then, place the smaller structure into

Leave around 20cm of space between

the two panels all the way around when

Join Panels

the larger one.

arranging them.

Connect the inside and outside panels using corner ties or tying wire, both at the top and bottom. These ties should be spaced around 30

Consider that larger planters need more

ties for stability, while smaller ones

**Add Geotextile** 

to 45 centimeters apart.

need fewer.

into the outside compartment with the decorative stones. Fill with Compost

This prevents the compost from seeping

Fill the inner gabion with compost. Fill with Stones

Add your plant(s) into the compost in the inner basket to complete your DIY

Add Your Plants

Use 2 smaller panels inside and 2 larger panels outside, leaving about 20 cm between them. each sheet's length.

Manually bend the panels until they form a rounded shape. You can also roll the sheets along a car tire or a similar round object.

Connect and bend the larger outer panels by repeating steps 2-5. **Place in Final Location** Position your round compartments in the preferred location.

Line the inside of the inner basket with geotextile before filling it with compost.

Fill the outer gabion with the calculated amount of stone.

