## **HOW TO CAT PROOF A** Balcony


Wire cutter

Tape measure

## Chicken wire PVC Cable ties

What You'll Need:


- Staples Marker Hooks or eye screws Drill
- Protective gloves Hammer
- Plan & Measure

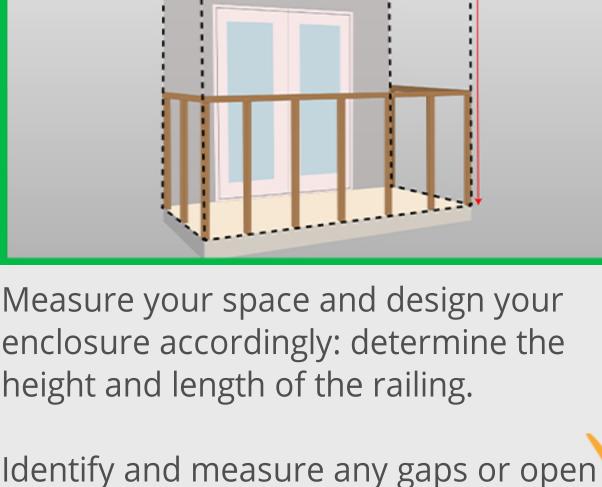

Prepare the Netting

spaces between railings or on open

sides that need to be covered.

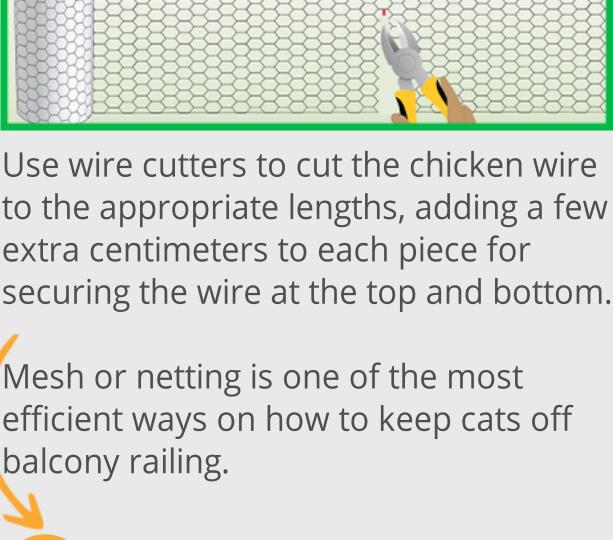

**Mark Screw Locations** 

You'll need to attach the netting to something at the top and on both sides of the terrace.

Mark the locations where you will install

hooks or eye screws, spacing them

Install Eye Screws or Hooks


every 15-30 cm.

if needed.

Drill pilot holes at the marked locations

Securely screw in the hooks or eye

screws into the solid base.

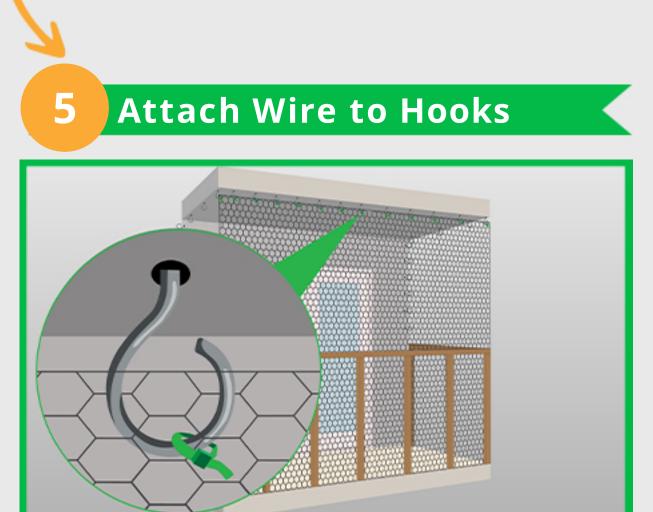

Start with one section of your space and

attach your prepared netting.

securely fastened.

staples.

railing.

Loop the chicken wire through the

hooks or eye screws and secure it with

cable ties or wire, ensuring it is taut and

Note: For wooden bases, you can use

**Secure Bottom to Railing** 

If your balcony has a solid wooden

Secure to Wooden Base

Pull the chicken wire up and secure it to the sides (to any vertical bars or posts) of the railing by using cable ties or wire. Ensure the wire is taut and that there are no gaps where your pet could squeeze through. **Install Remaining Areas** 

using cable ties or wire ties. If your netting is not large enough, you can easily join two pieces of mesh

Furnish & Supervise

Join the mesh together at the corners

Fill any gaps with smaller pieces of wire, securing as before.

Test the installation by pushing to ensure it's secure before letting your feline onto the balcony. Also, check for

Continue by securing the bottom edge

of the chicken wire to the base of the

Use cable ties or wire to attach the wire

to the railing at regular intervals,

ensuring it is tight and secure.

base, you can use staples at 15cm intervals to attach the wire, ensuring the staples are securely fastened. Attach on the Sides

Following the process of how to cat proof a balcony described in steps 2-7, continue attaching the chicken wire to both sides of the terrace as well.

Join Mesh Together 10

together in the same way.

loose spots and gaps.

Inspect the chicken wire edges for sharp points or edges.