


HOW TO CONNECT Chain Link Fence

What You'll Need:

- Protective gloves
- Chain link fence
- Pliers


1 Lay Flat on the Ground

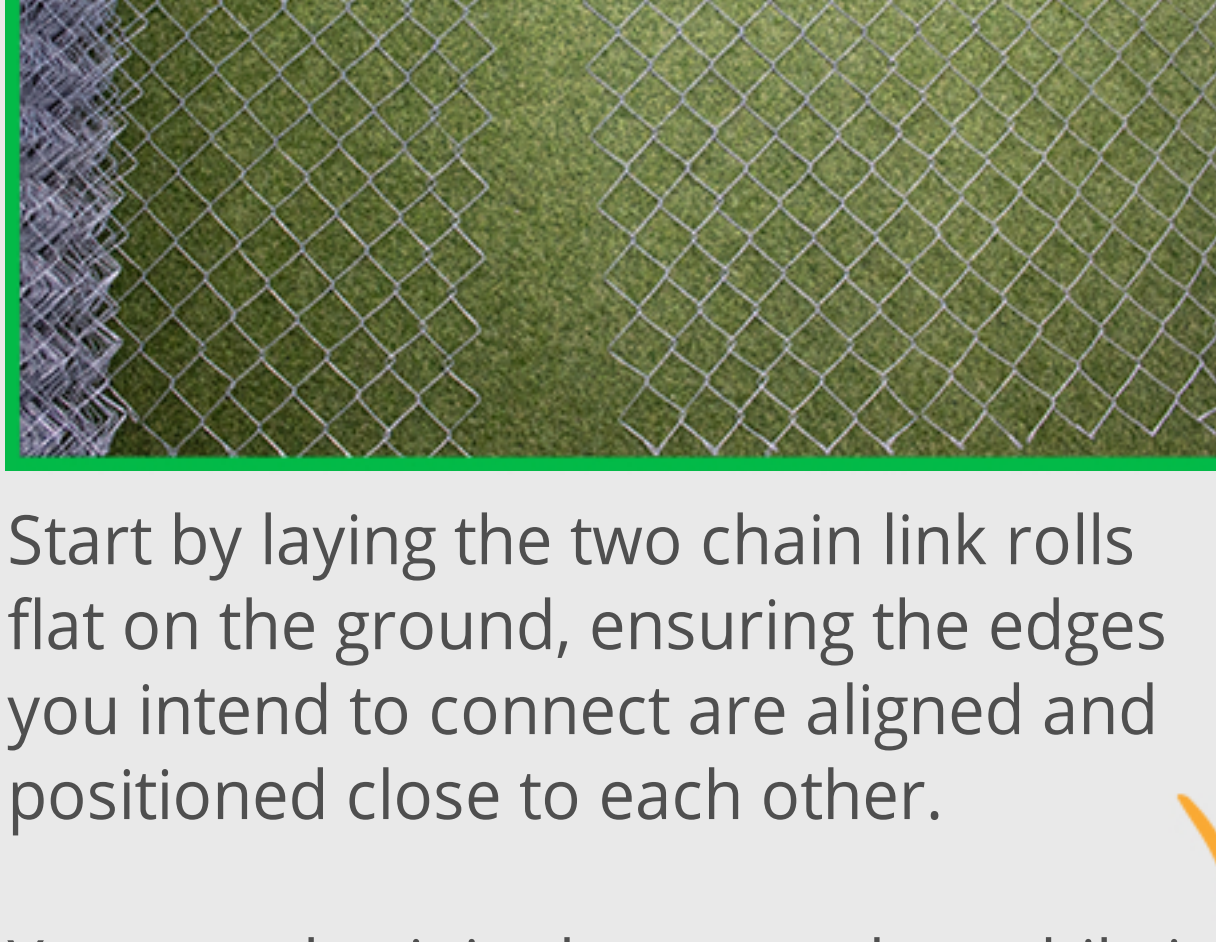

Start by laying the two chain link rolls flat on the ground, ensuring the edges you intend to connect are aligned and positioned close to each other.

You can also join them together while in an upright position.


2 Untwist a Wire

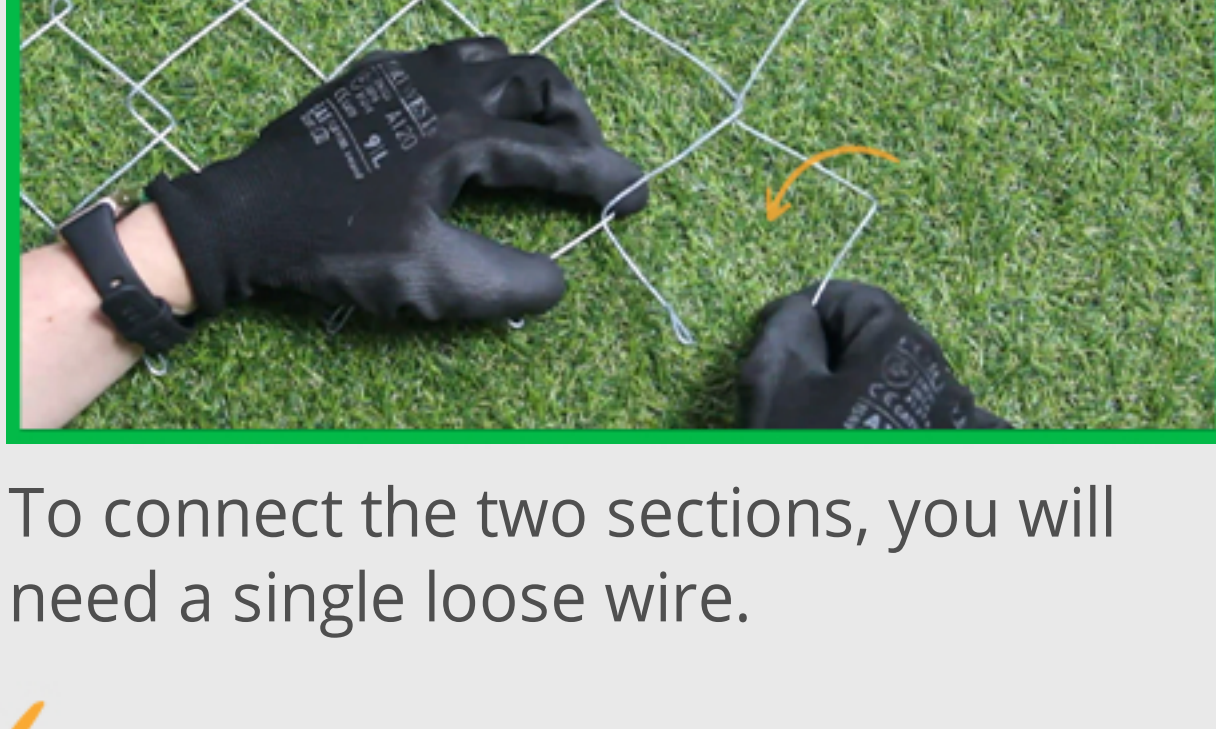

To connect the two sections, you will need a single loose wire.


You can remove one wire from one of the rolls by gently untwisting it from the mesh.

3 Prepare the Loose End

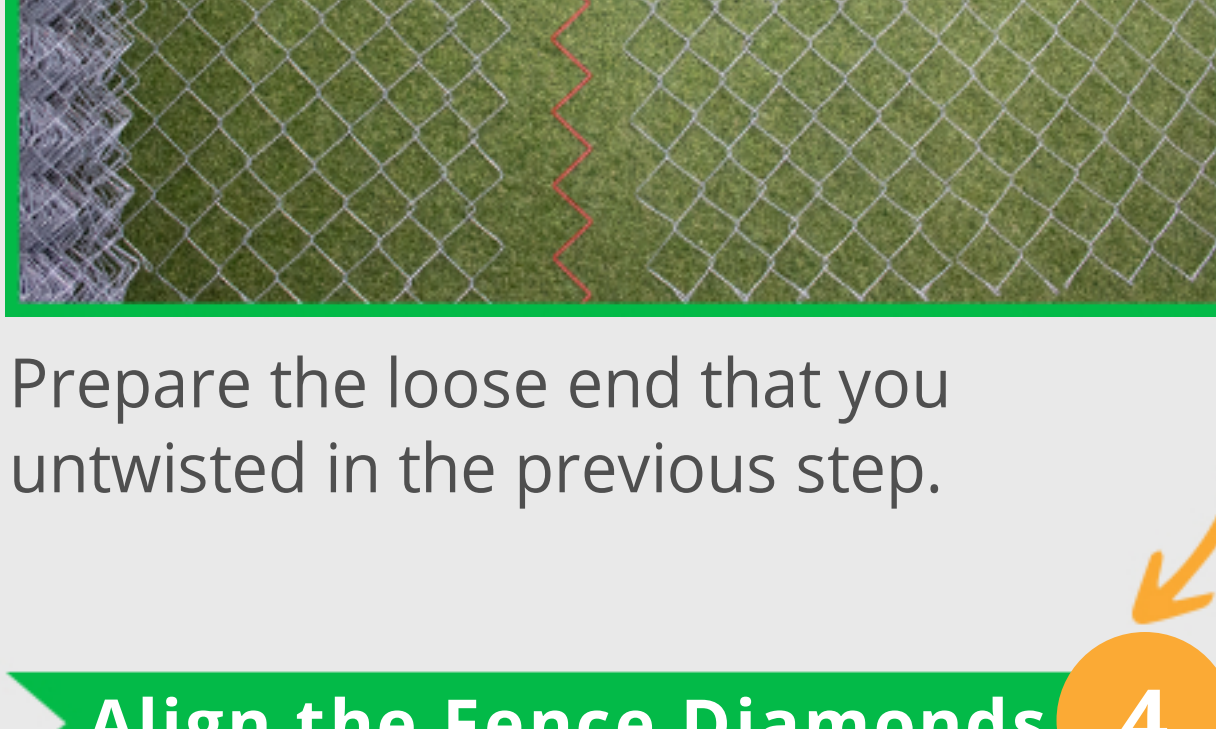

Prepare the loose end that you untwisted in the previous step.


4 Align the Fence Diamonds

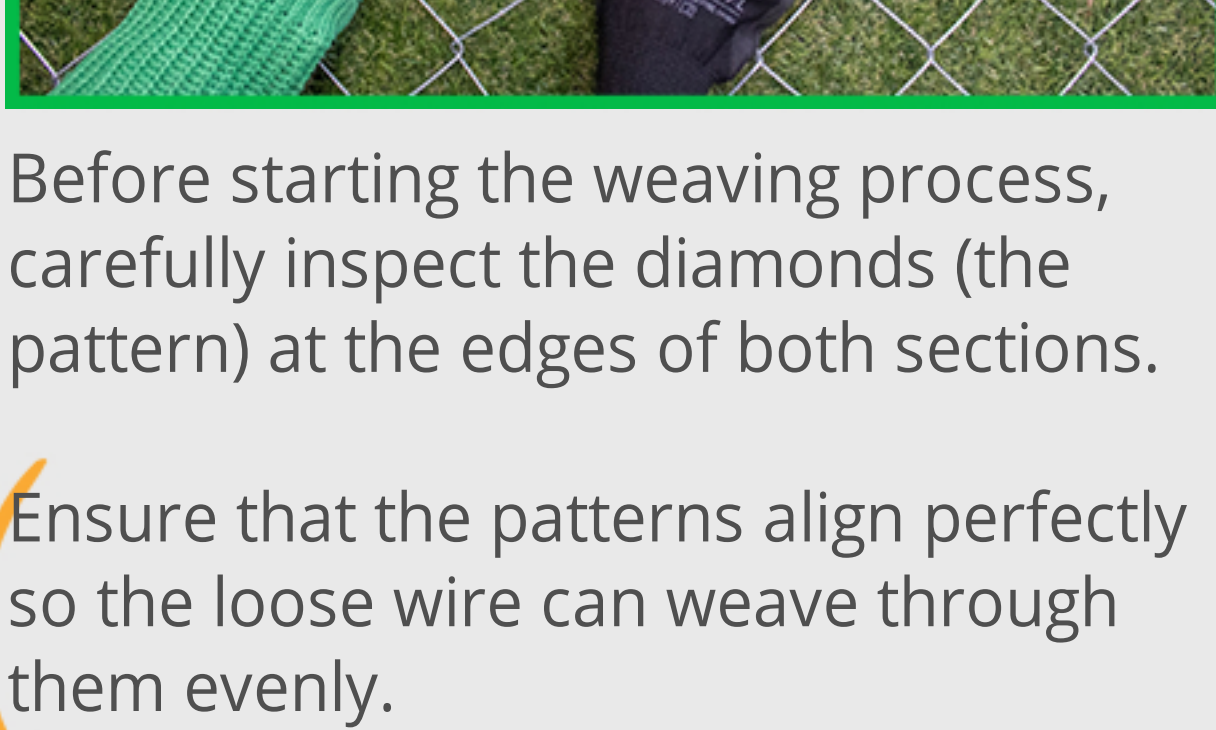

Before starting the weaving process, carefully inspect the diamonds (the pattern) at the edges of both sections.


Ensure that the patterns align perfectly so the loose wire can weave through them evenly.

5 Start Spinning the Wire

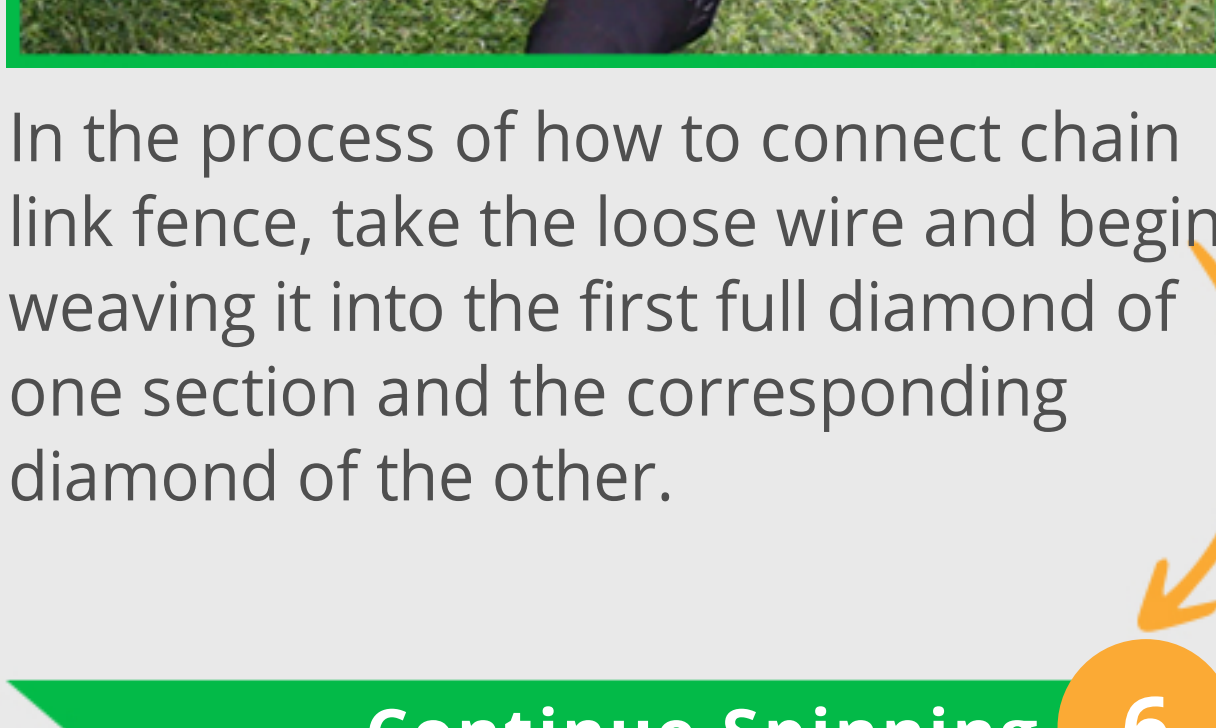


In the process of how to connect chain link fence, take the loose wire and begin weaving it into the first full diamond of one section and the corresponding diamond of the other.

6 Continue Spinning

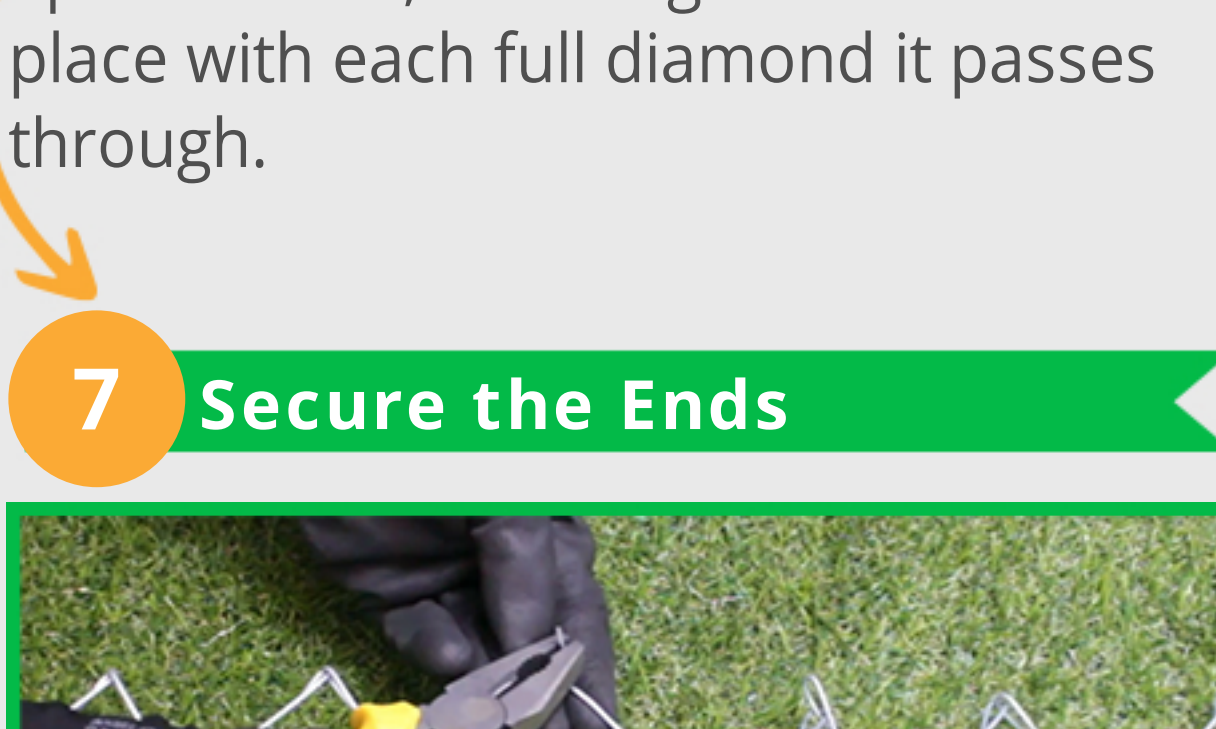

Spin the wire, ensuring it locks into place with each full diamond it passes through.

7 Secure the Ends

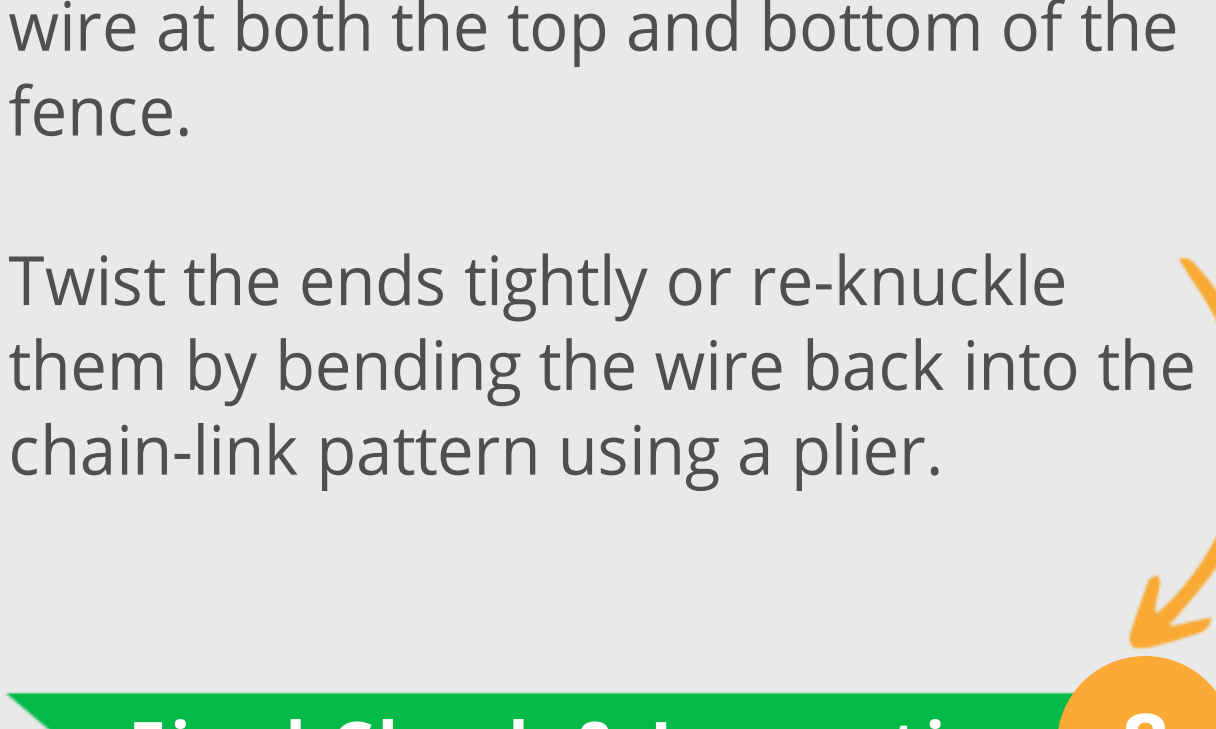

Once the loose wire has been fully woven through, secure the ends of the wire at both the top and bottom of the fence.

Twist the ends tightly or re-knuckle them by bending the wire back into the chain-link pattern using a plier.

8 Final Check & Inspection



After securing the ends, carefully inspect the entire length of the connection.

Ensure that the diamonds align perfectly and that there are no loose wires or gaps.