



## HOW TO INSTALL A TENSION WIRE WITH T POSTS

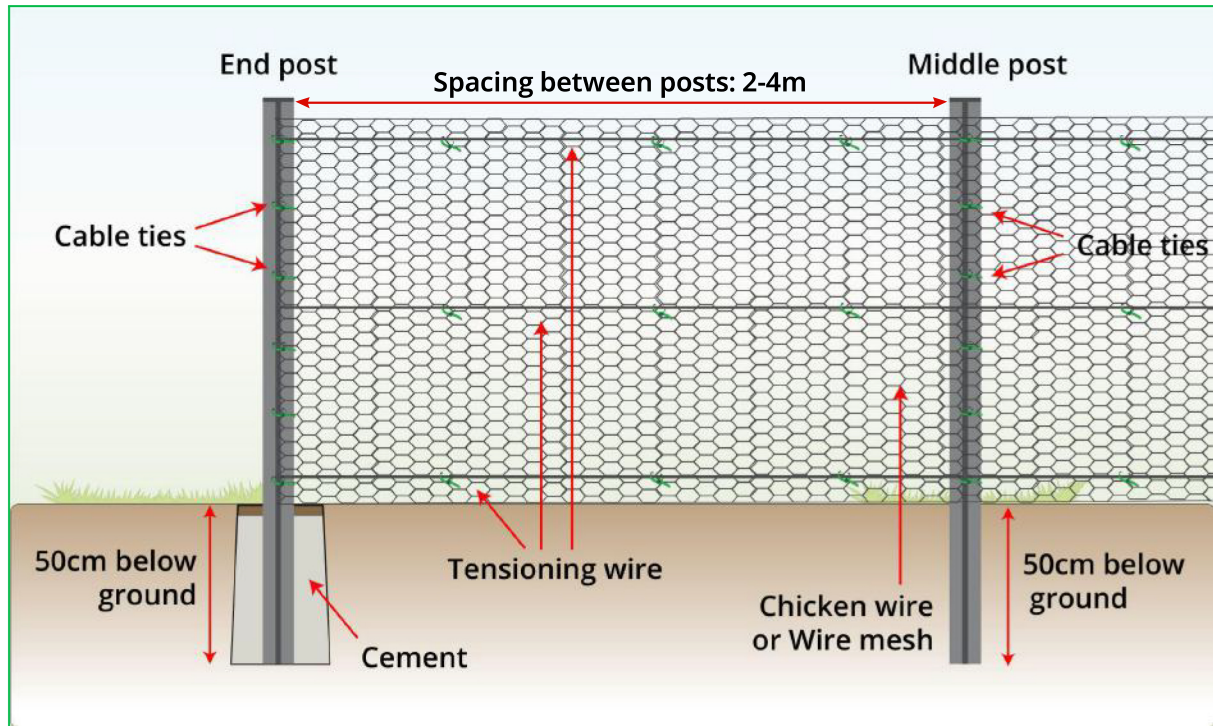

### THINGS YOU'LL NEED


- [Tensioning wire](#)
- [Chicken wire](#) or [welded wire mesh](#) up to 14g/2mm
- Plier
- String
- Wire cutters
- [Metal T posts](#)
- Post driver or mallet
- [Cable ties](#)
- Spade (optional)
- Cement (optional)

## INSTRUCTIONS

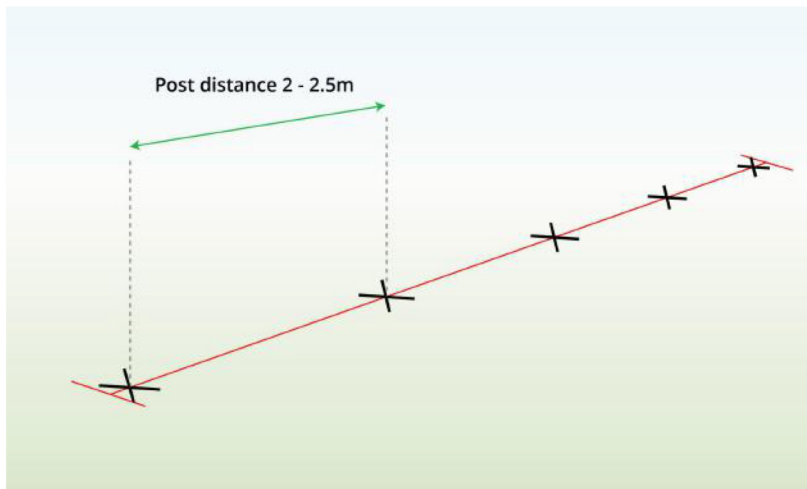

### Step 1: Mark the Post Location


Mark the post location with a distance of 2-2.5m apart from each other.

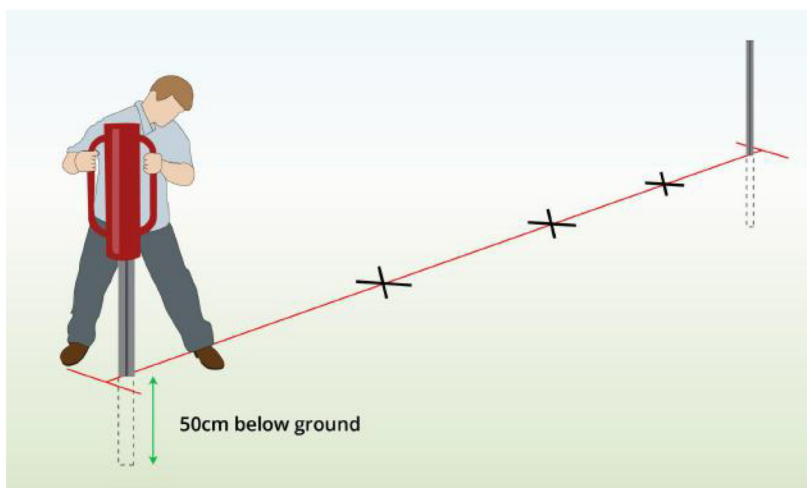

### Step 2: Install End Posts


Use a post driver or mallet to drive the end posts 50cm into the ground.

Make sure the posts face the same direction by ensuring the holes face each other.

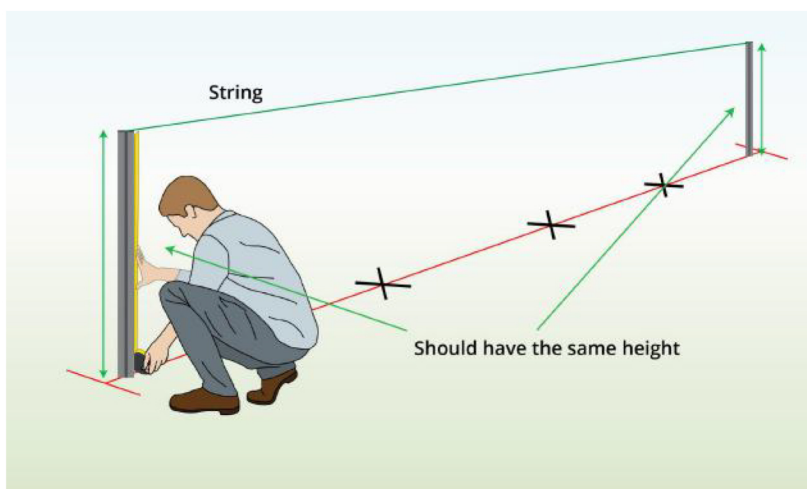


### Step 3: Check for Same Height

Attach a piece of string between the end posts then check with a tape measure that they have been installed at the same height.

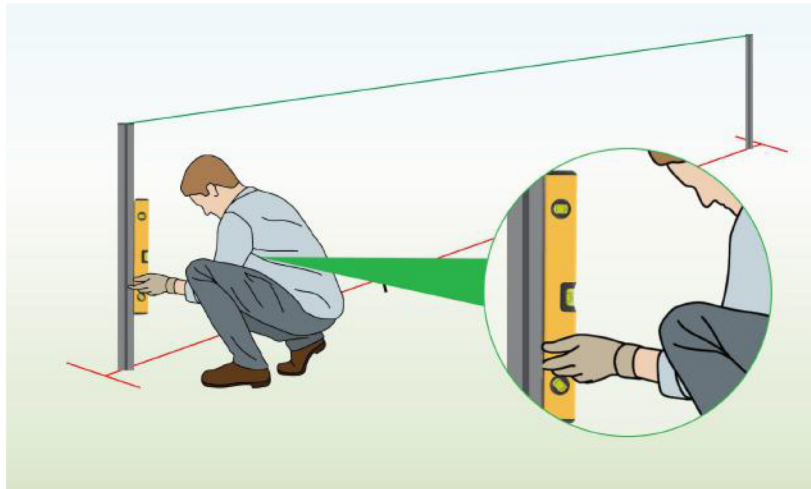


#### Step 4: Check for Straightness

Also use a spirit level to ensure the posts have also been installed perfectly straight.

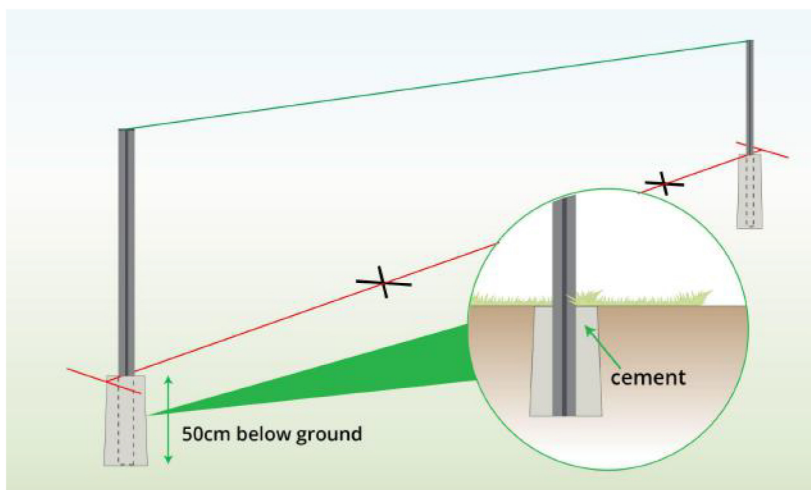

#### Step 5: Set in Concrete (Optional)


For stronger and more secure fencing, set your posts in concrete by digging a 50cm hole and pouring cement into it for your post to sit in.

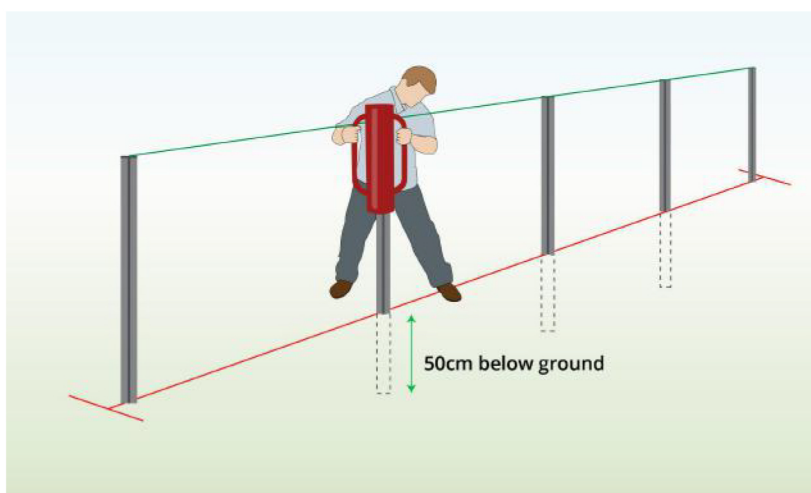

#### Step 6: Install Middle Posts


Install middle posts by repeating steps 2-4.

Remember to check the posts are facing in the same direction and they are being installed both straight and at the same height.

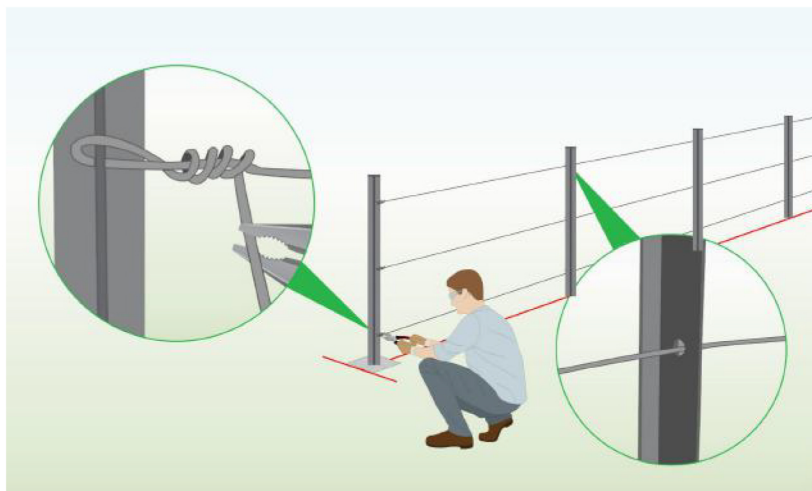

### **Step 7: Attach Wire to Posts**


Wrap the tension wire around the hole of the end posts, then secure by simply twisting the end of the wire using a plier.

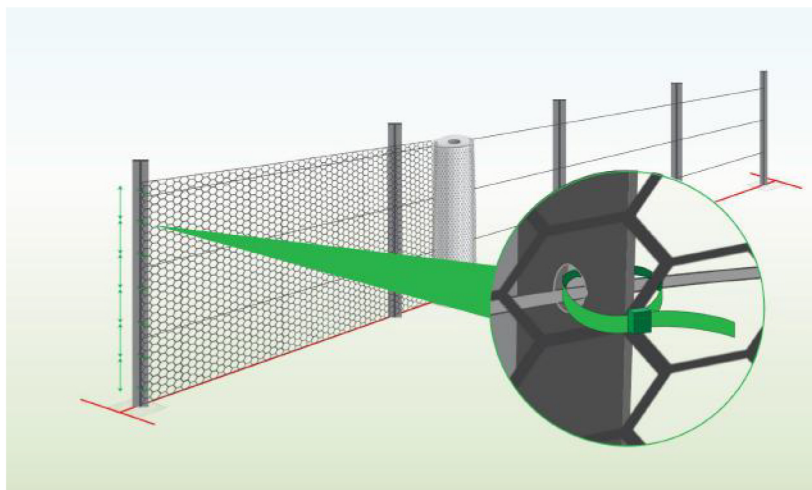

### **Step 8: Attach Mesh to Start Post**

Attach the mesh to the post using cable ties, which you can thread through the pre-drilled holes in the post.

You can also add more cable ties by enclosing the whole post.

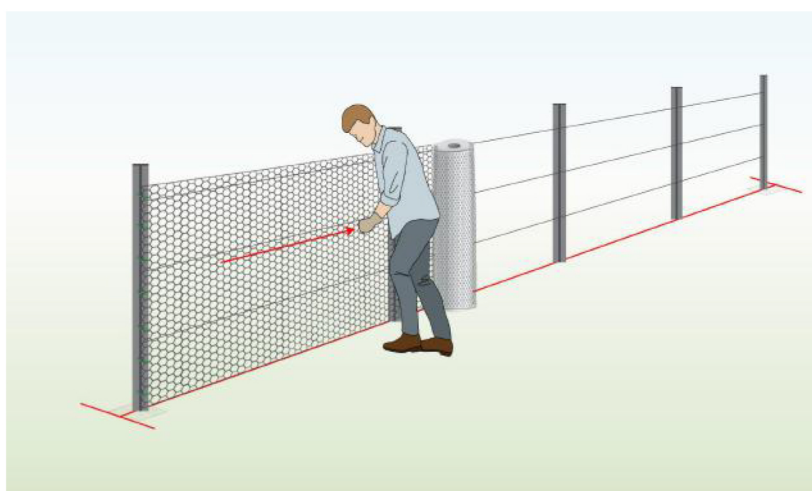


### **Step 9: Pull Tight**

Pull the mesh tight then attach it to the second post with cable ties.

Repeat until you get to the end post.



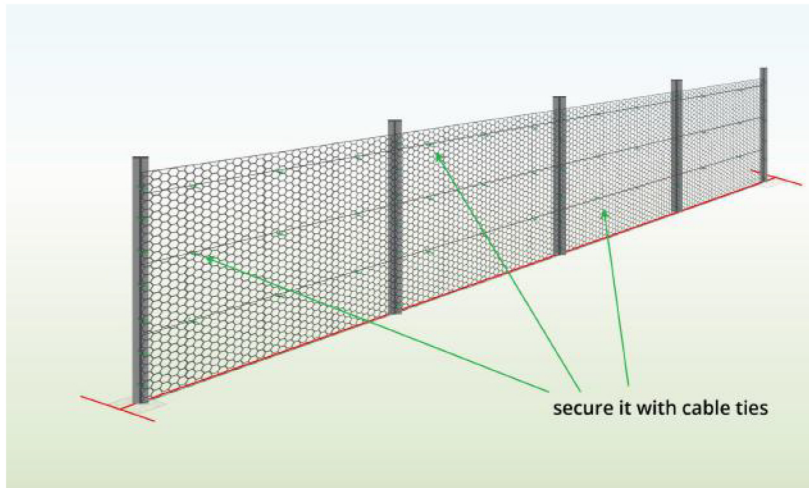

### **Step 10: Attach Mesh to Tensioning Wire**

If you have installed tension wire, attach the mesh using cable ties approximately 30-45 cm apart.