


BADGER PROOF FENCE INSTALLATION


With T Posts

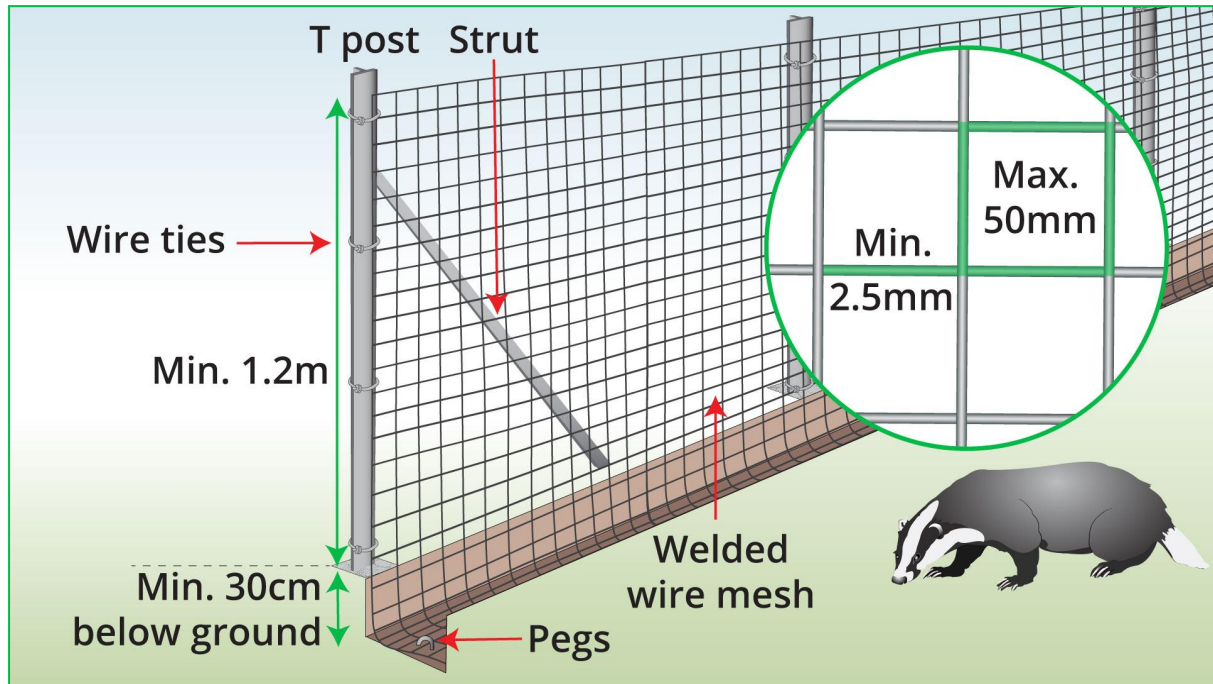

THINGS YOU'LL NEED


- [Wire mesh](#) or [Panels](#)
- [T posts](#)
- [Reinforcement struts](#)
- [Bolt & Nut](#)
- Wire ties
- Post driver
- [Pegs](#)
- Spade
- Cement
- Level
- Tape measure

INSTRUCTIONS

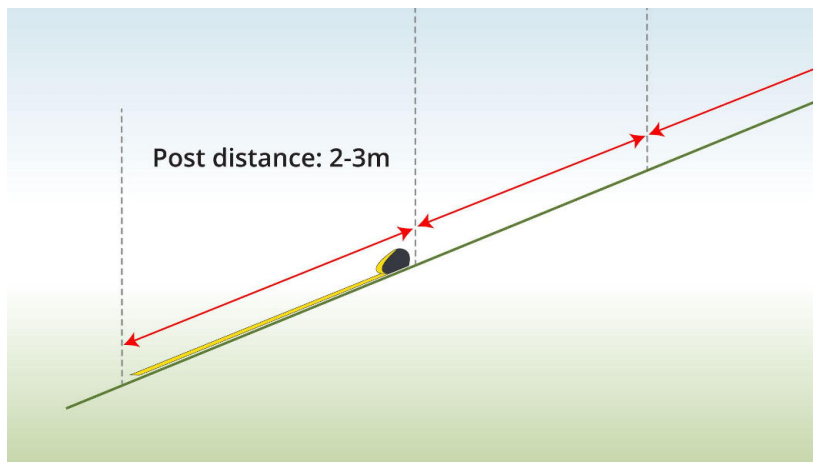


Step 1: Measure Post Distance

Measure and mark the post locations 2–3 m apart.

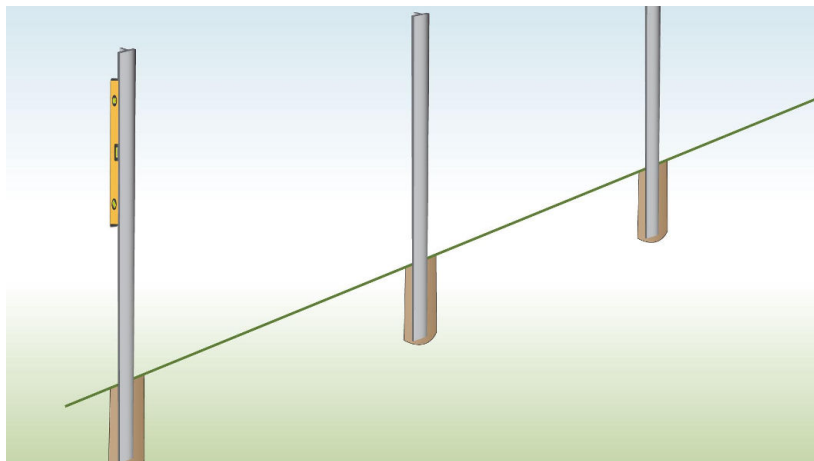


Step 2: Dig Post Holes

Dig the holes, insert the posts, and make sure they're aligned with the flat side facing outwards.

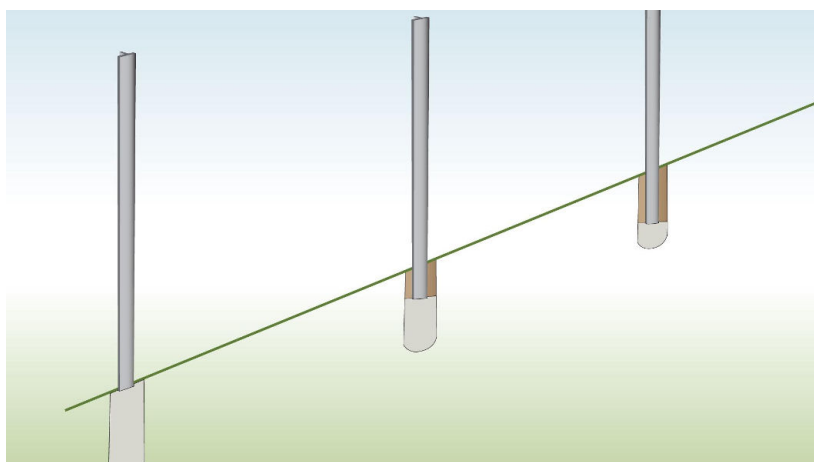


Step 3: Set in Concrete

Set the posts in concrete for stability.

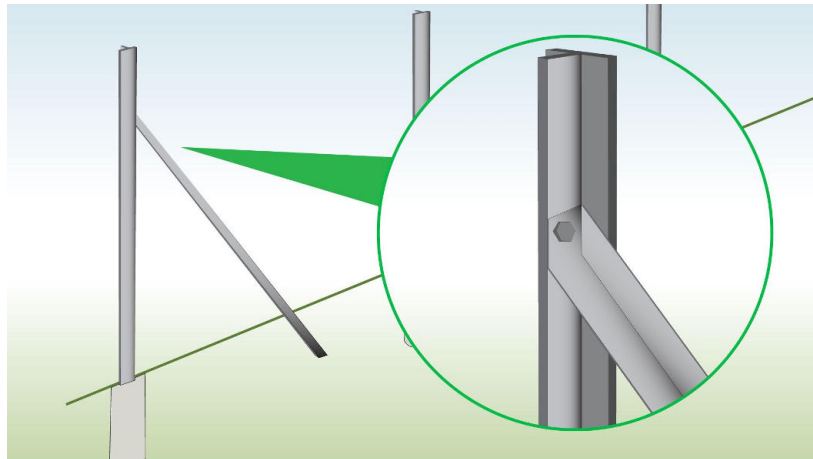


Step 4: Install the Strut

Attach the reinforcement strut by aligning its hole with the second hole from the top of the T post.

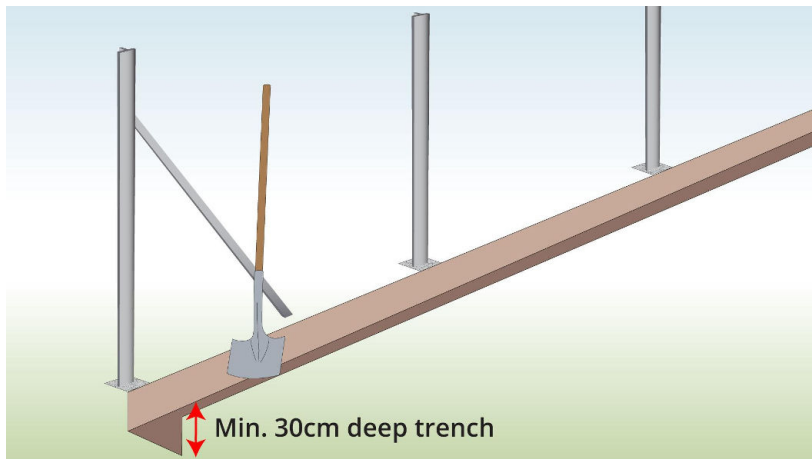


Step 5: Dig a Trench

Dig a minimum 30cm deep trench along the fence line.

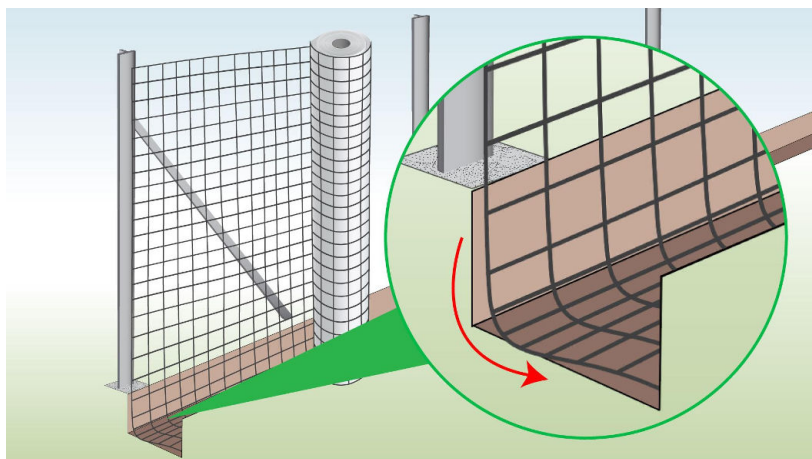


Step 6: Unroll the Mesh

Start unrolling the mesh, then bend and fold the bottom section into the trench.

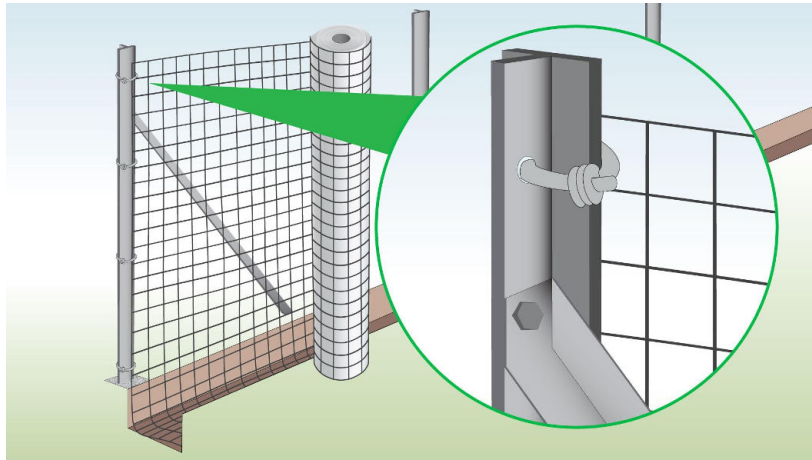


Step 7: Attach Mesh

Attach the mesh to the end post using wire ties, which you can thread through the pre-drilled holes.

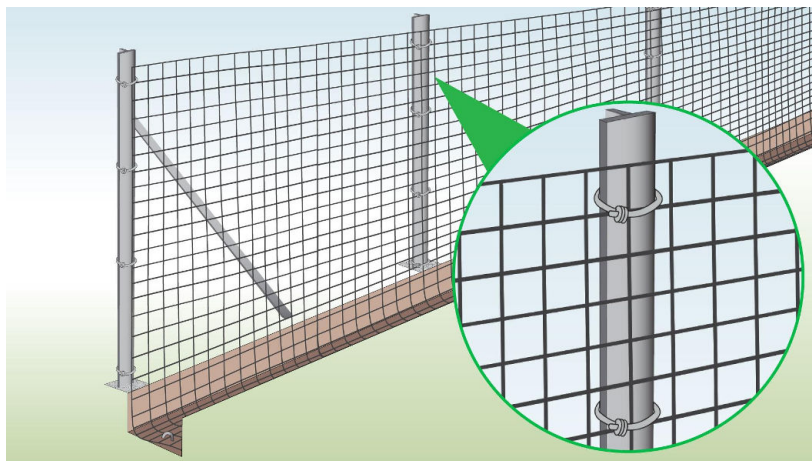

Step 8: Attach to Middle Posts


Attach the mesh to the middle posts by repeating the same step as before.

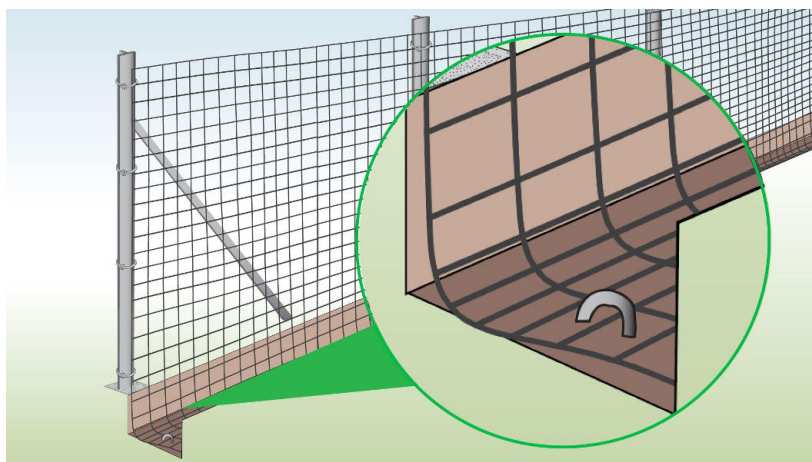

Step 9: Secure the Bottom

Secure the bottom of your fence to the ground by using pegs.

Repeat this at every 60cm.

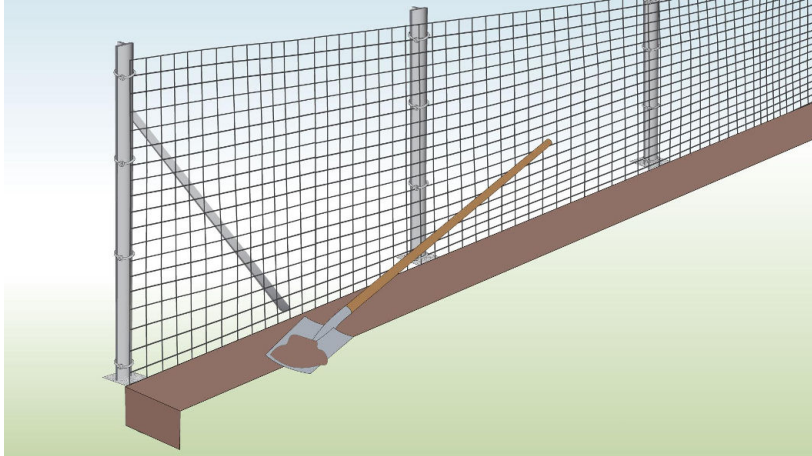

Step 10: Cover the Trench

Cover the outer flap by placing a layer of soil or mulch over it.