


HOW TO ATTACH PRIVACY SCREEN to Chain Link Fence

What You'll Need:


- Privacy screen
- Cable ties
- Protective gloves
- Wire cutters
- Tape measure

1 Measure Length

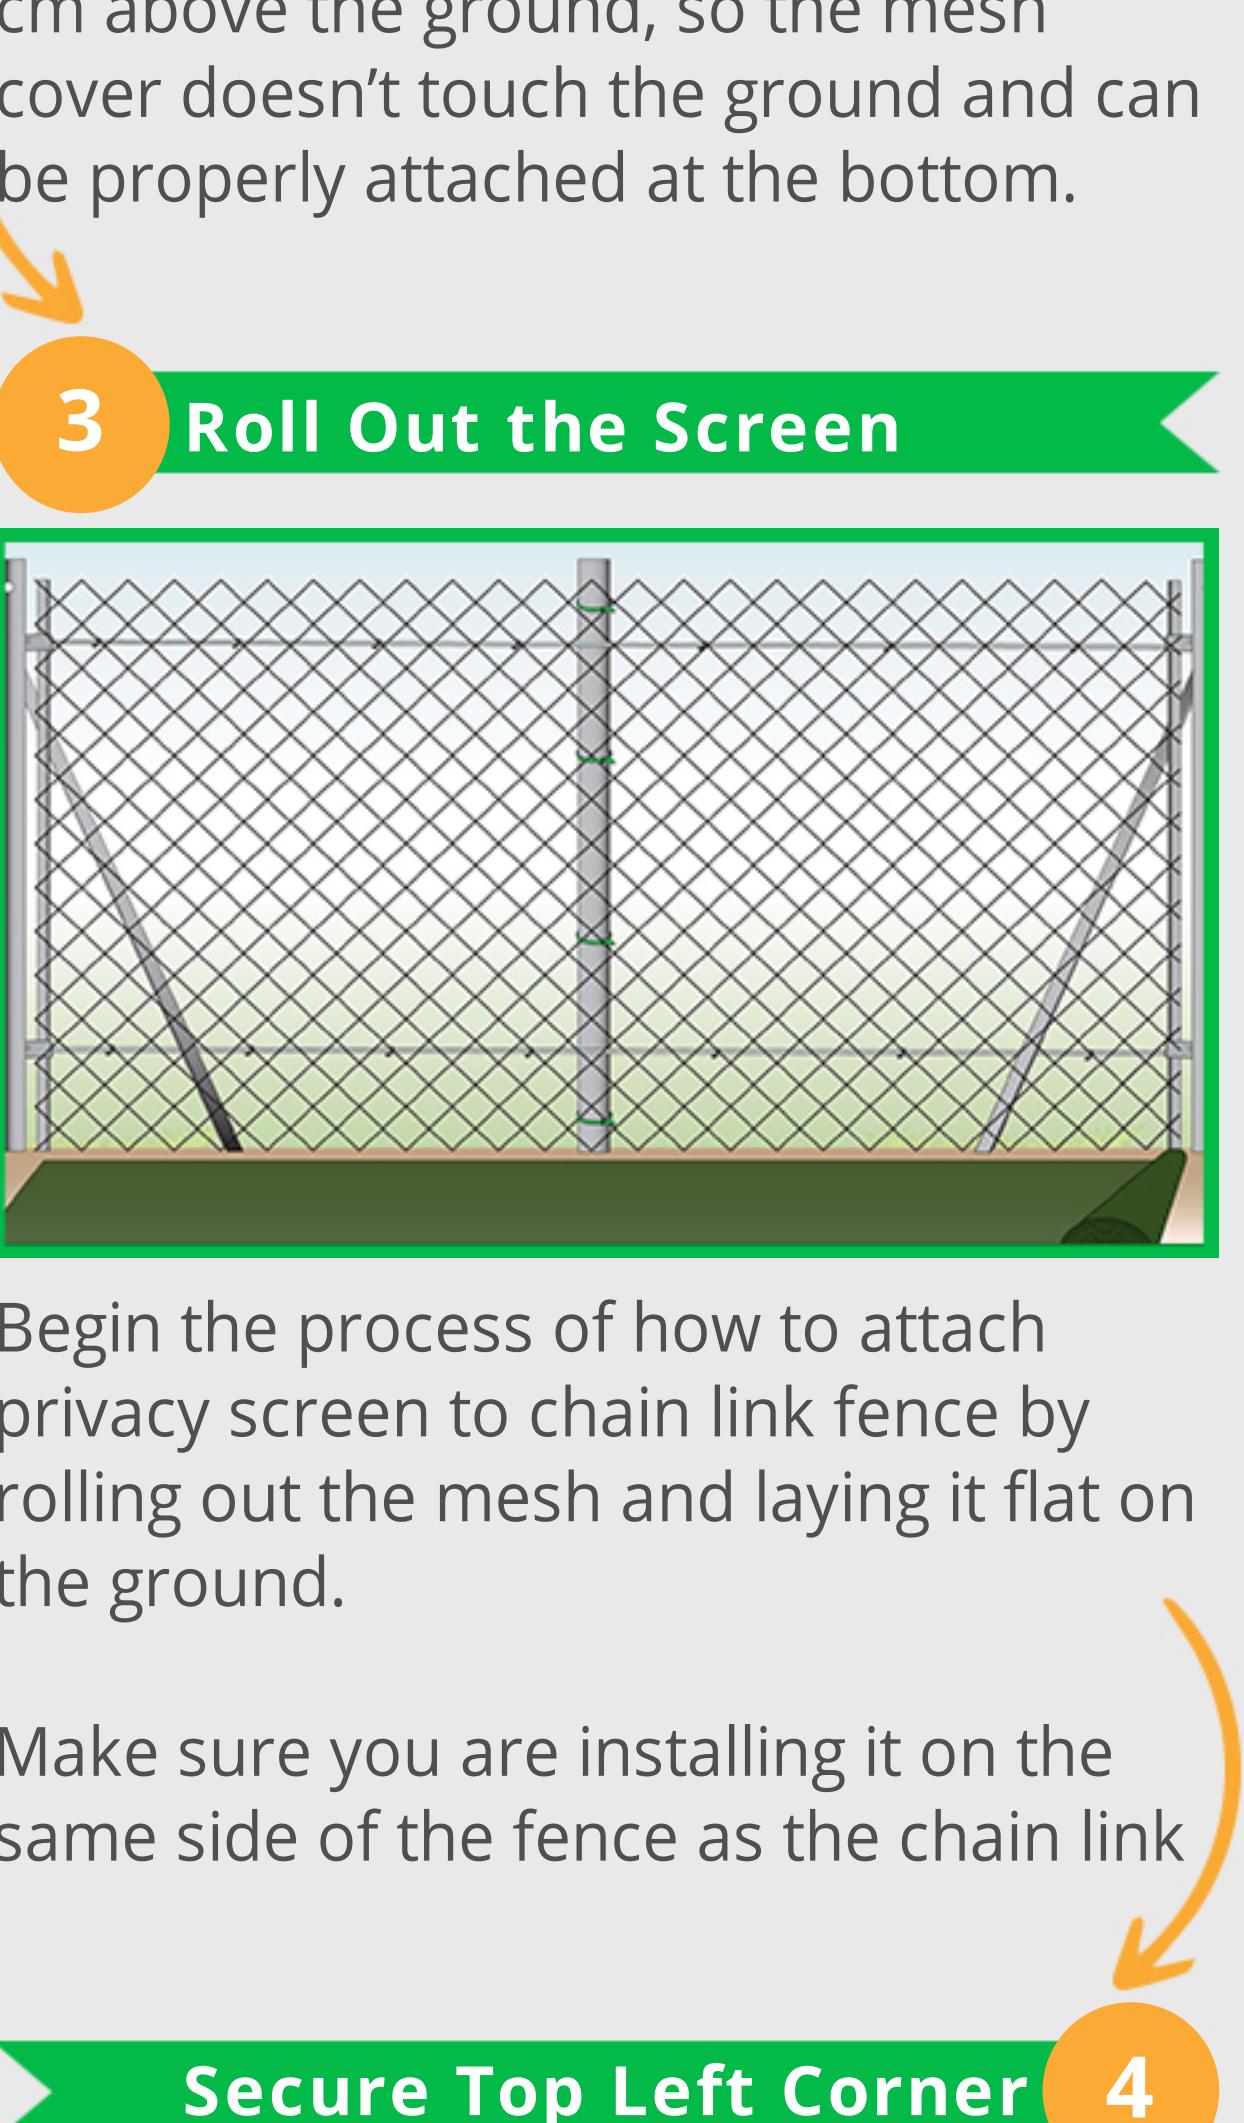

To determine the length of your privacy mesh, measure the distance from stretcher bar to stretcher bar.

2 Measure Height

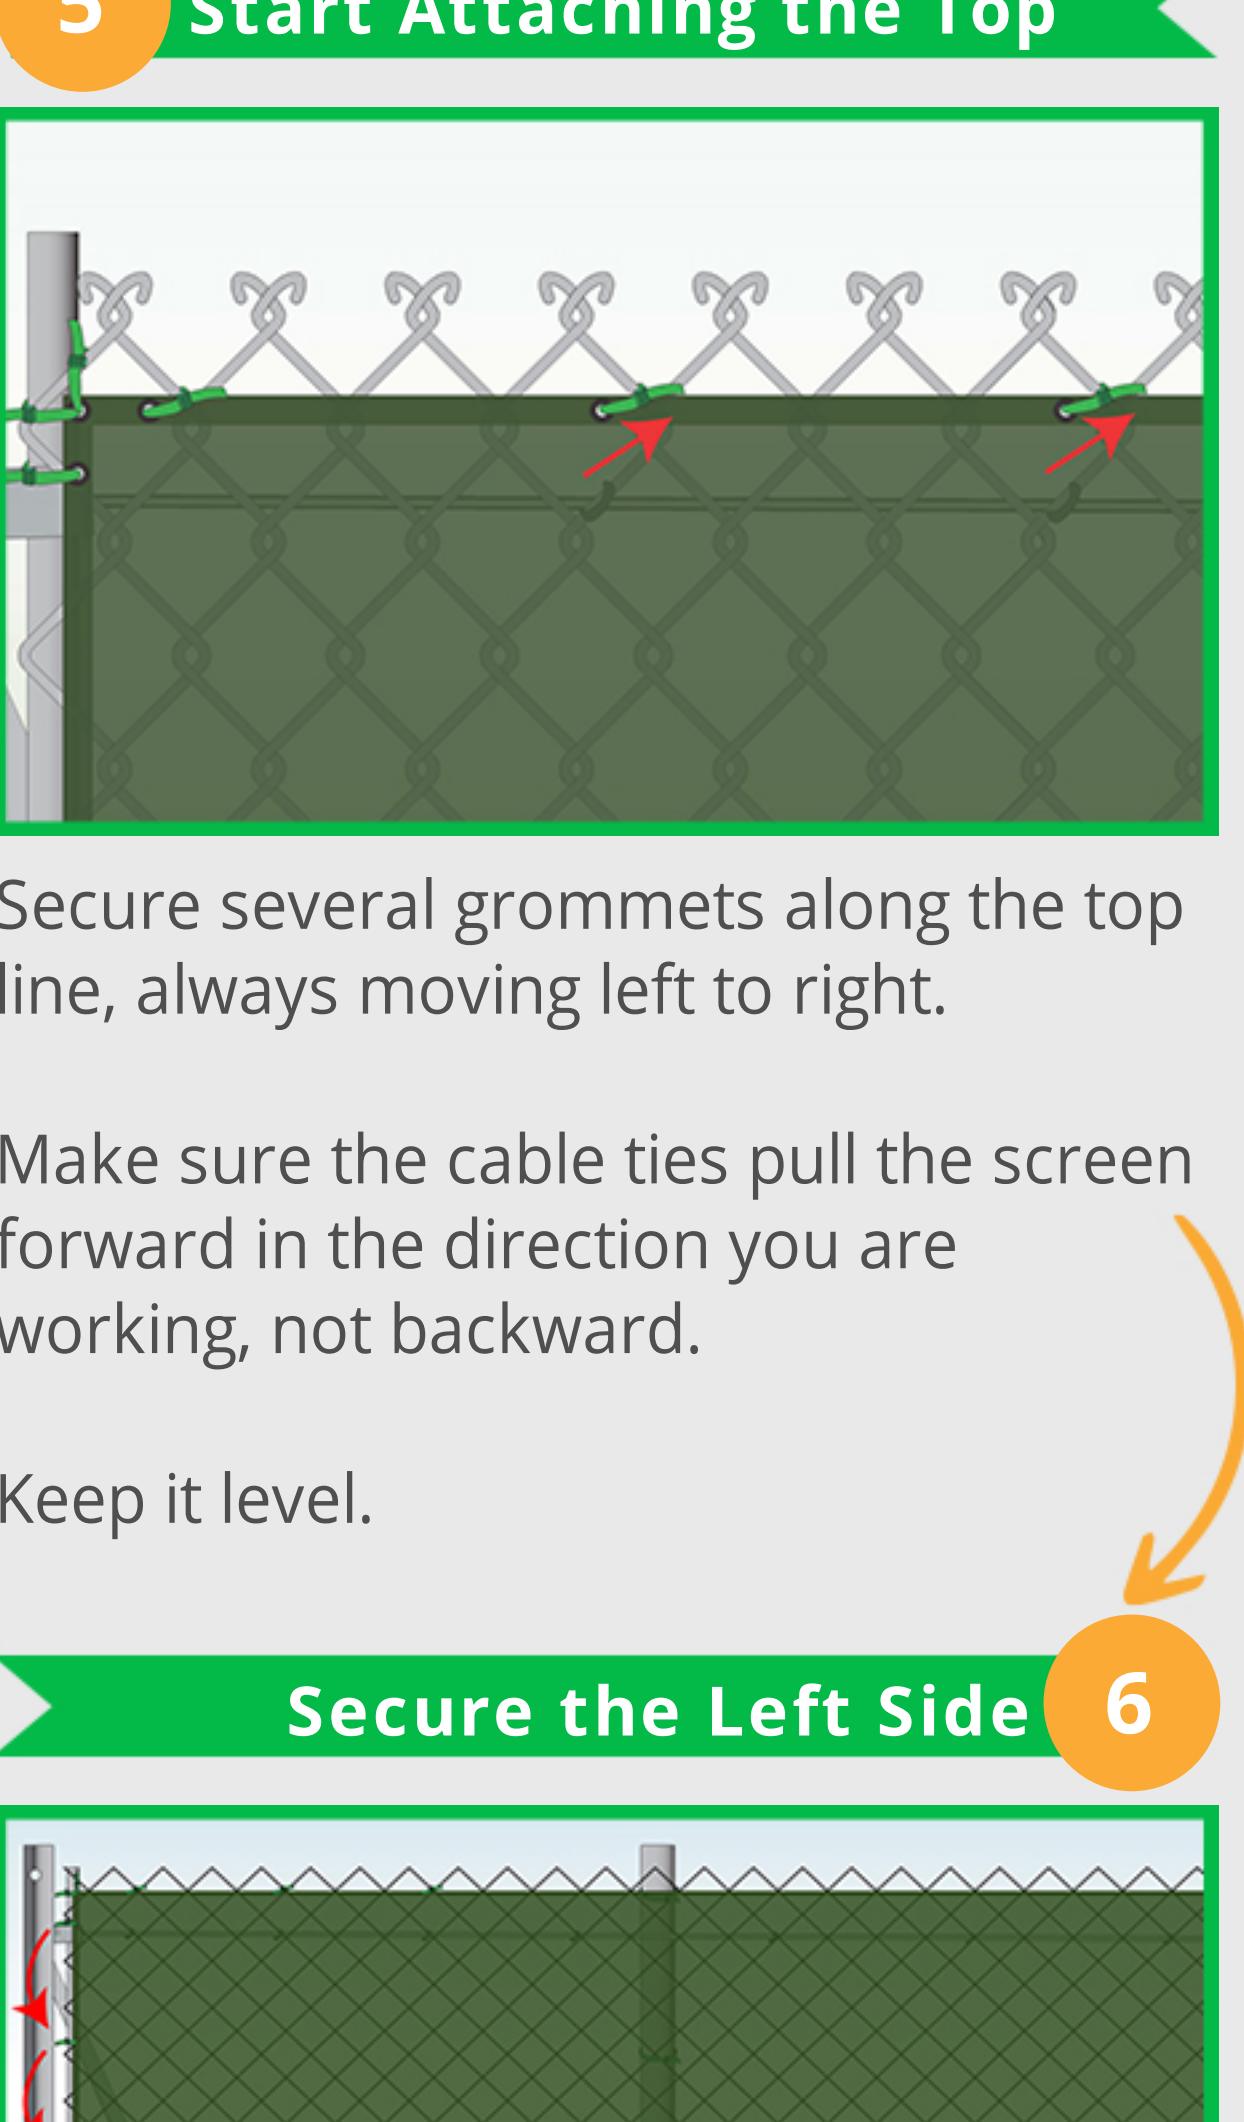

Measure the height from the top corner of the chain link diamond to about 10 cm above the ground, so the mesh cover doesn't touch the ground and can be properly attached at the bottom.


3 Roll Out the Screen



Begin the process of how to attach privacy screen to chain link fence by rolling out the mesh and laying it flat on the ground.

Make sure you are installing it on the same side of the fence as the chain link

4 Secure Top Left Corner

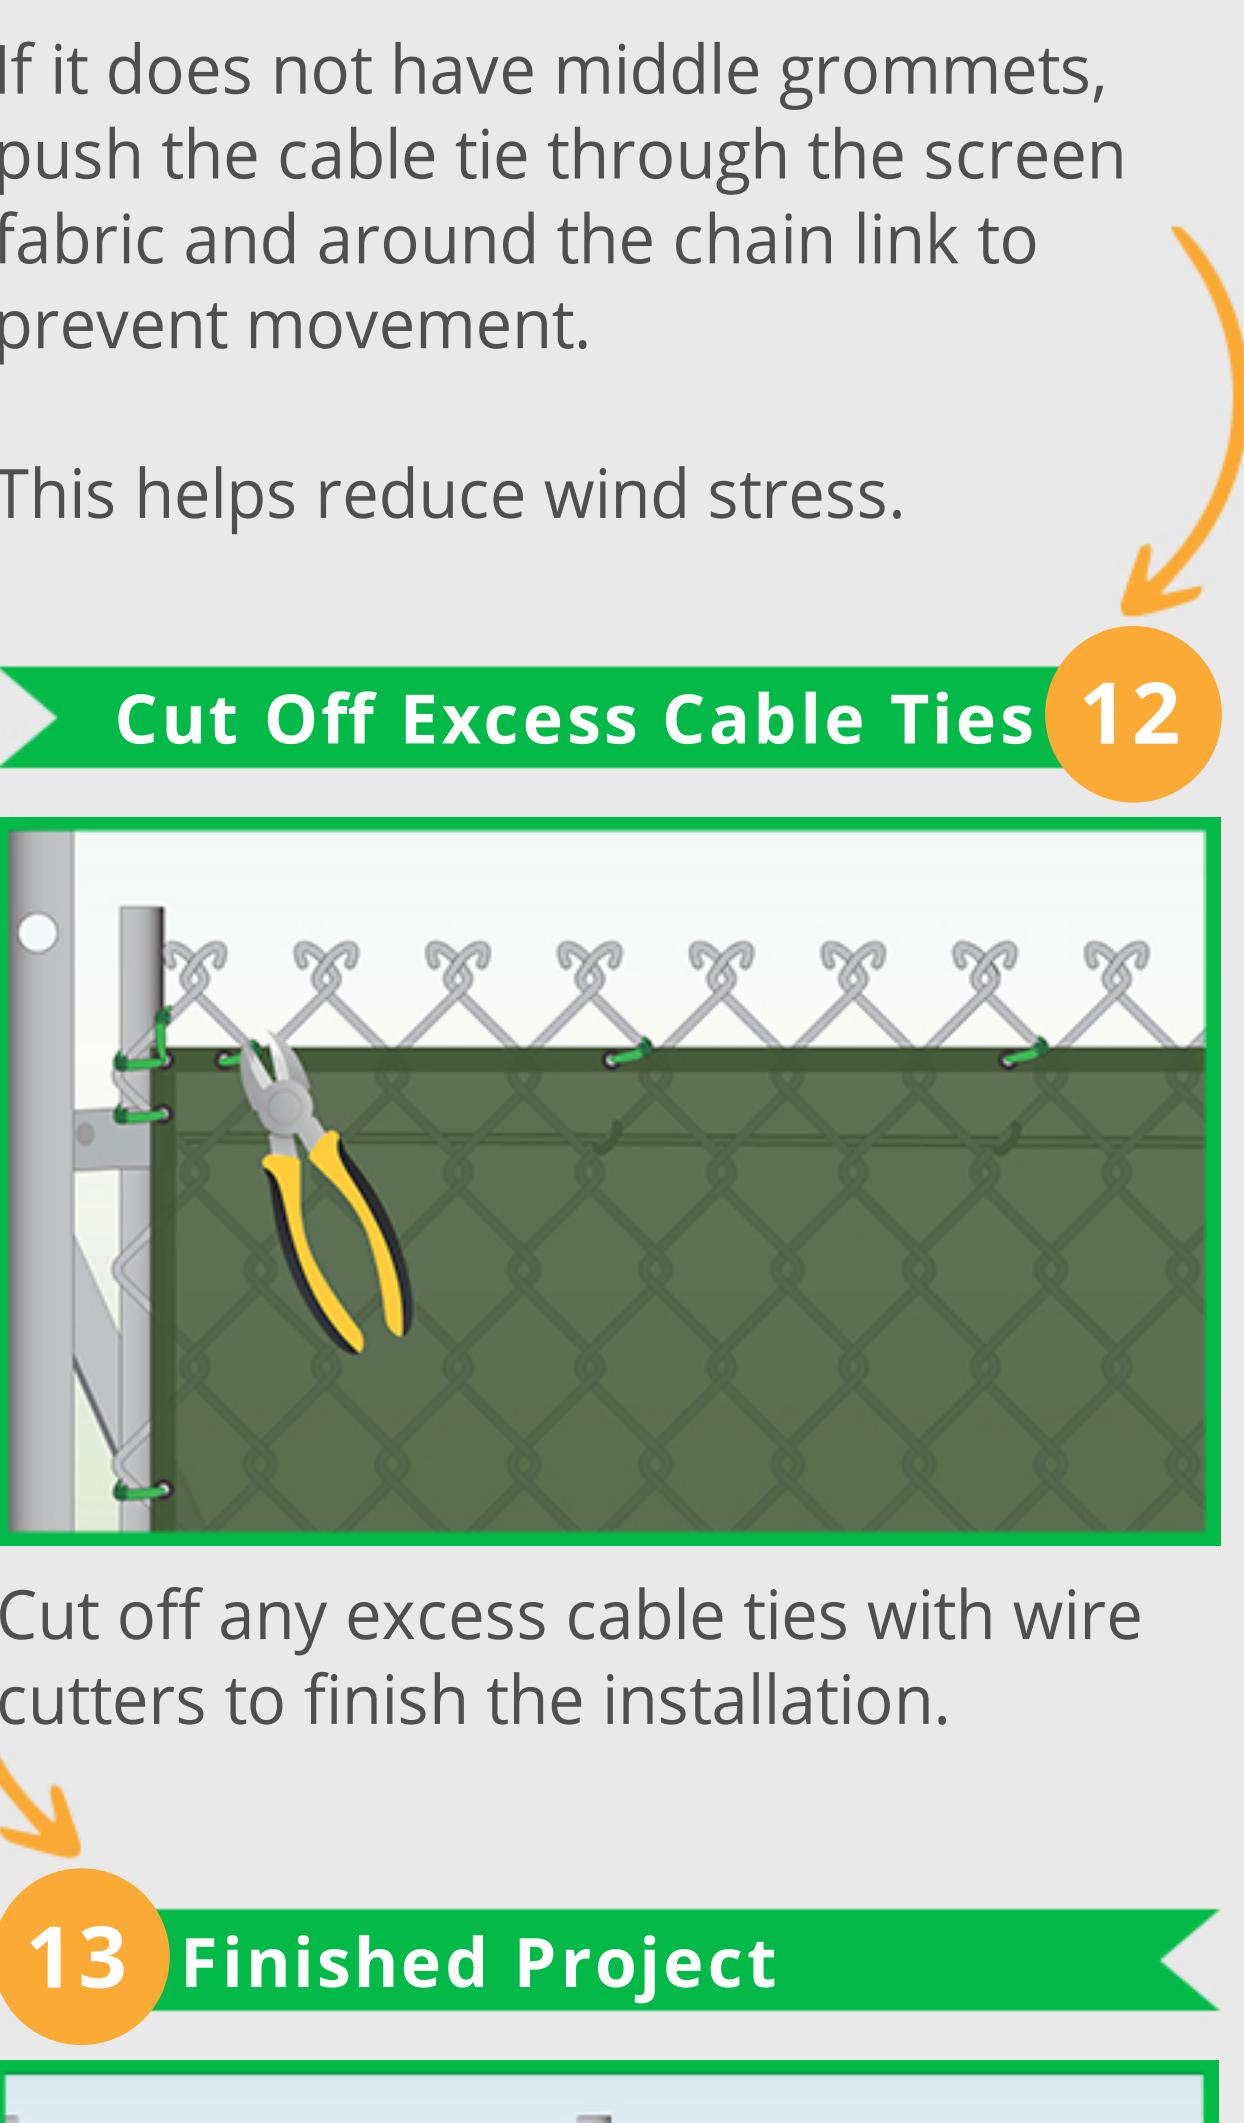

Start at the top left corner.

Secure the corner grommet with two ties: one to the stretcher bar and one to the fabric.

The next grommet down goes to the stretcher bar, and the first grommet to the right is tied to the fabric, facing

5 Start Attaching the Top

Secure several grommets along the top line, always moving left to right.

Make sure the cable ties pull the screen forward in the direction you are working, not backward.

Keep it level.

6 Secure the Left Side

Next, fasten the rest of the left side, securing each grommet to the stretcher bar from top to bottom.

7 Secure the Bottom Left Corner

Secure the bottom left corner the same way as the top corner, with one tie to the stretcher bar and one to the fabric.


8 Continue Along the Top

Continue working along the top edge, left to right, attaching the screen to the fabric and keeping it level.

9 Secure the Bottom Line


Then secure the bottom edge in the same manner.

10 Secure the Right Side

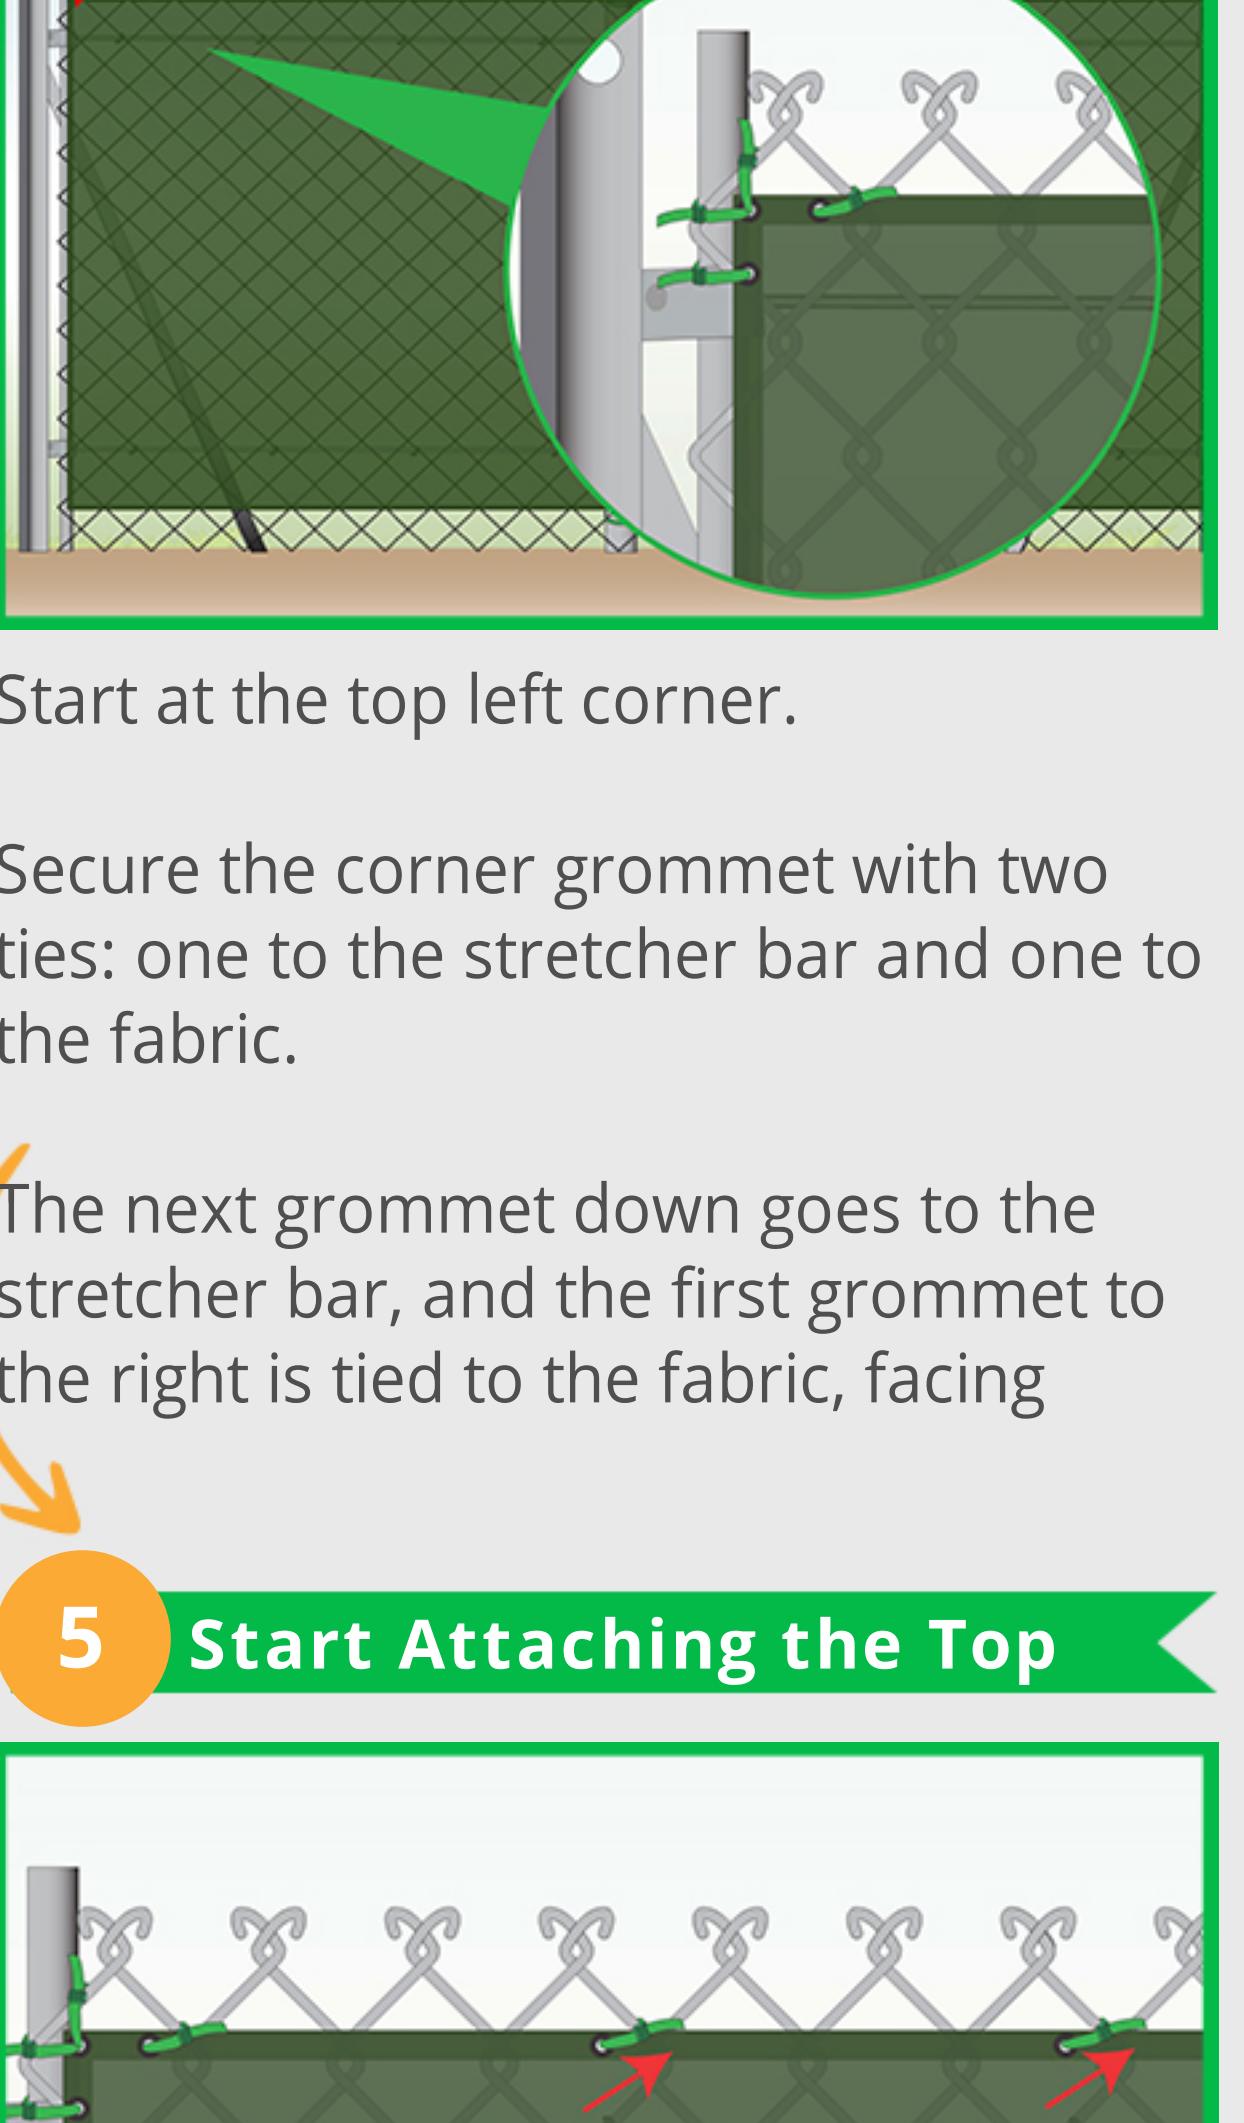

Finally, secure the right side of the mesh to the stretcher bar, working from top to bottom.

11 Add Middle Supports

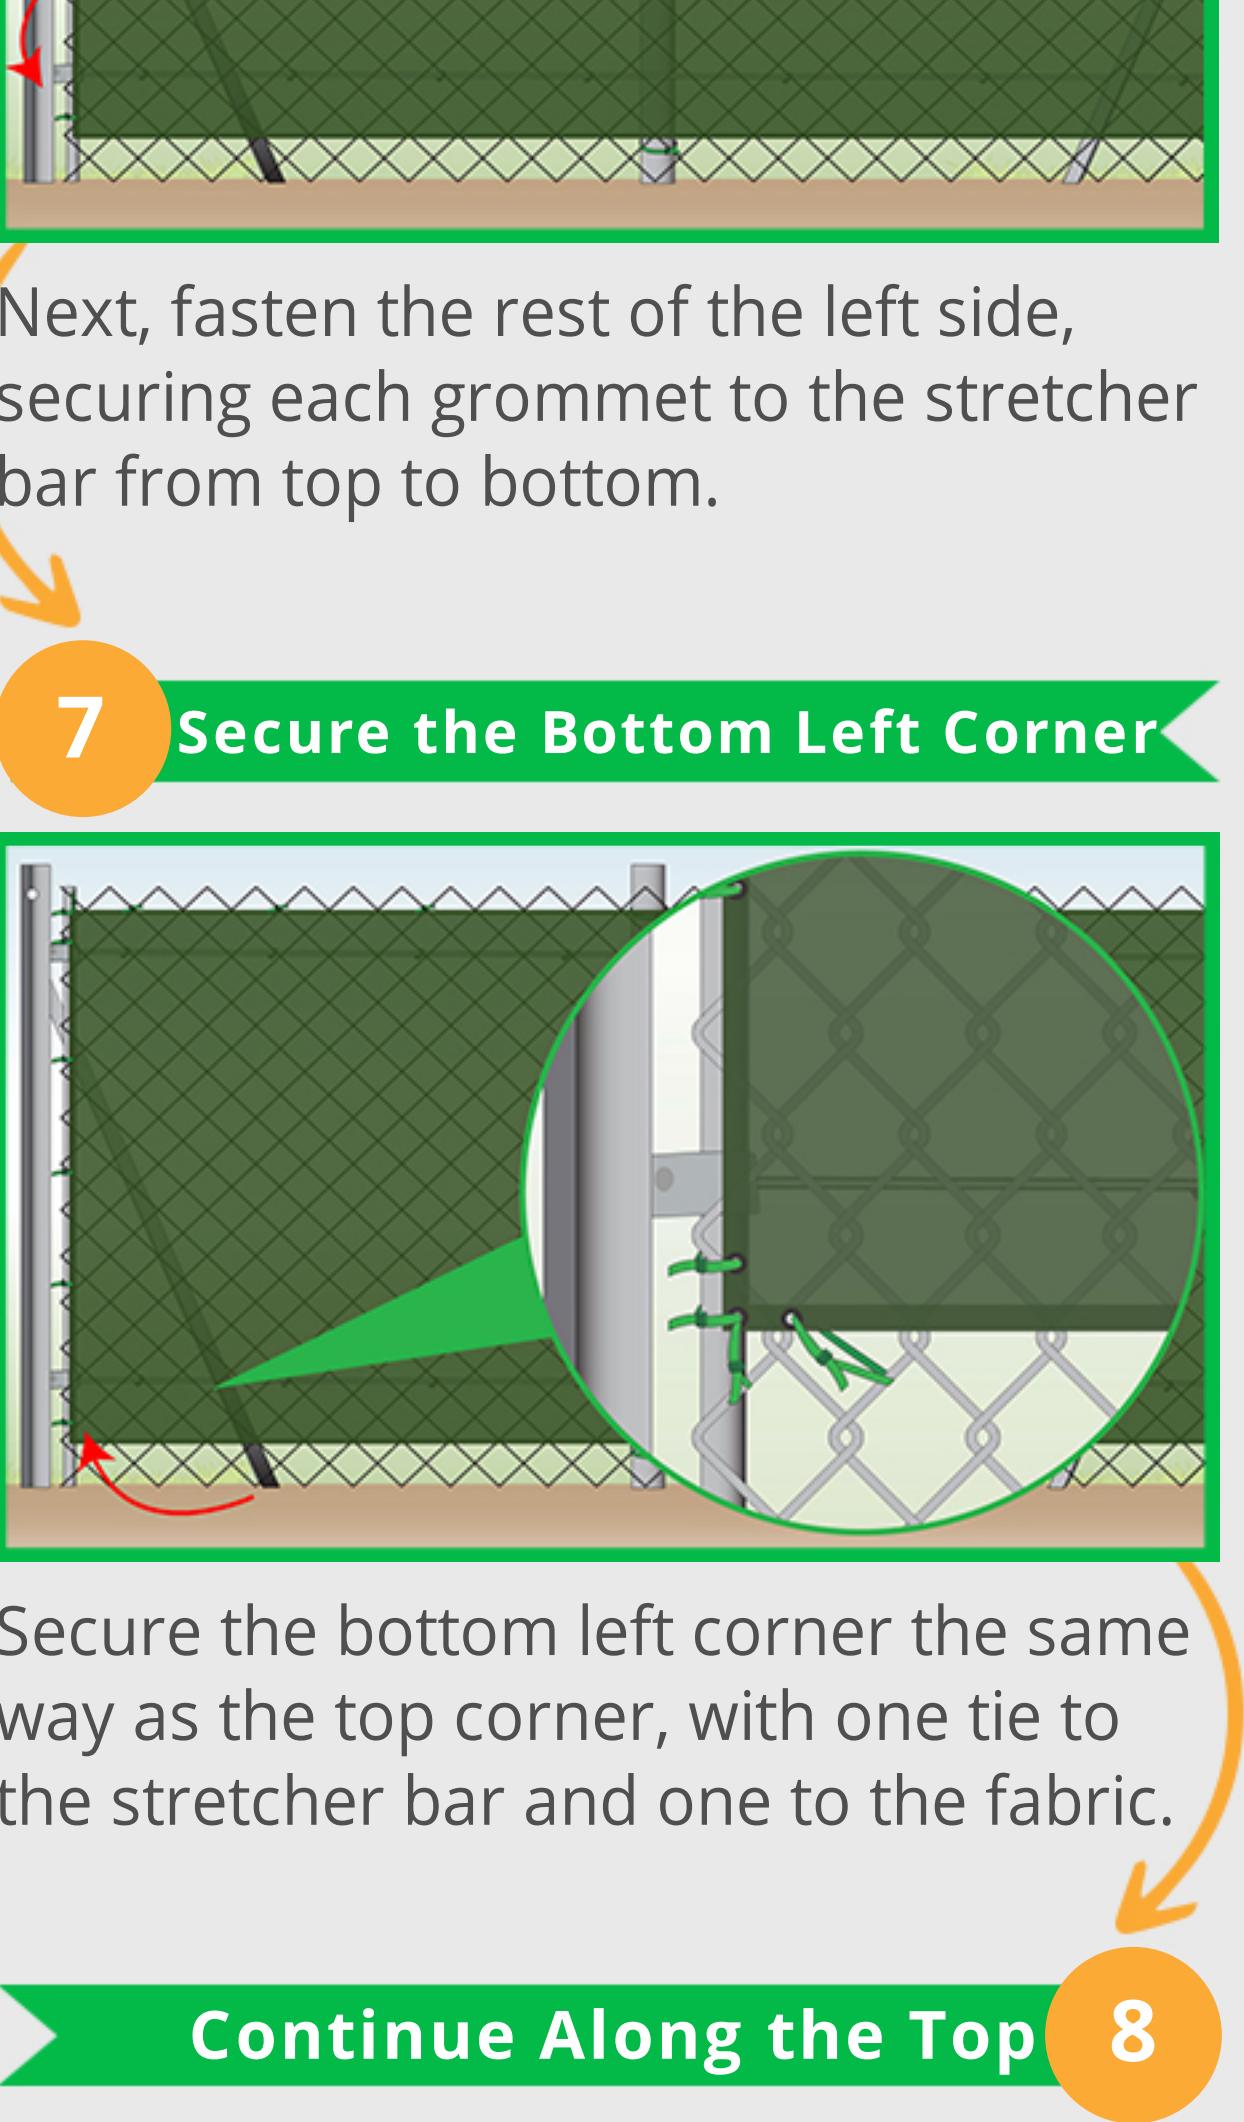


If the privacy screen has a middle row of grommets, secure them to the chain link fabric.

If it does not have middle grommets, push the cable tie through the screen fabric and around the chain link to prevent movement.


This helps reduce wind stress.

12 Cut Off Excess Cable Ties

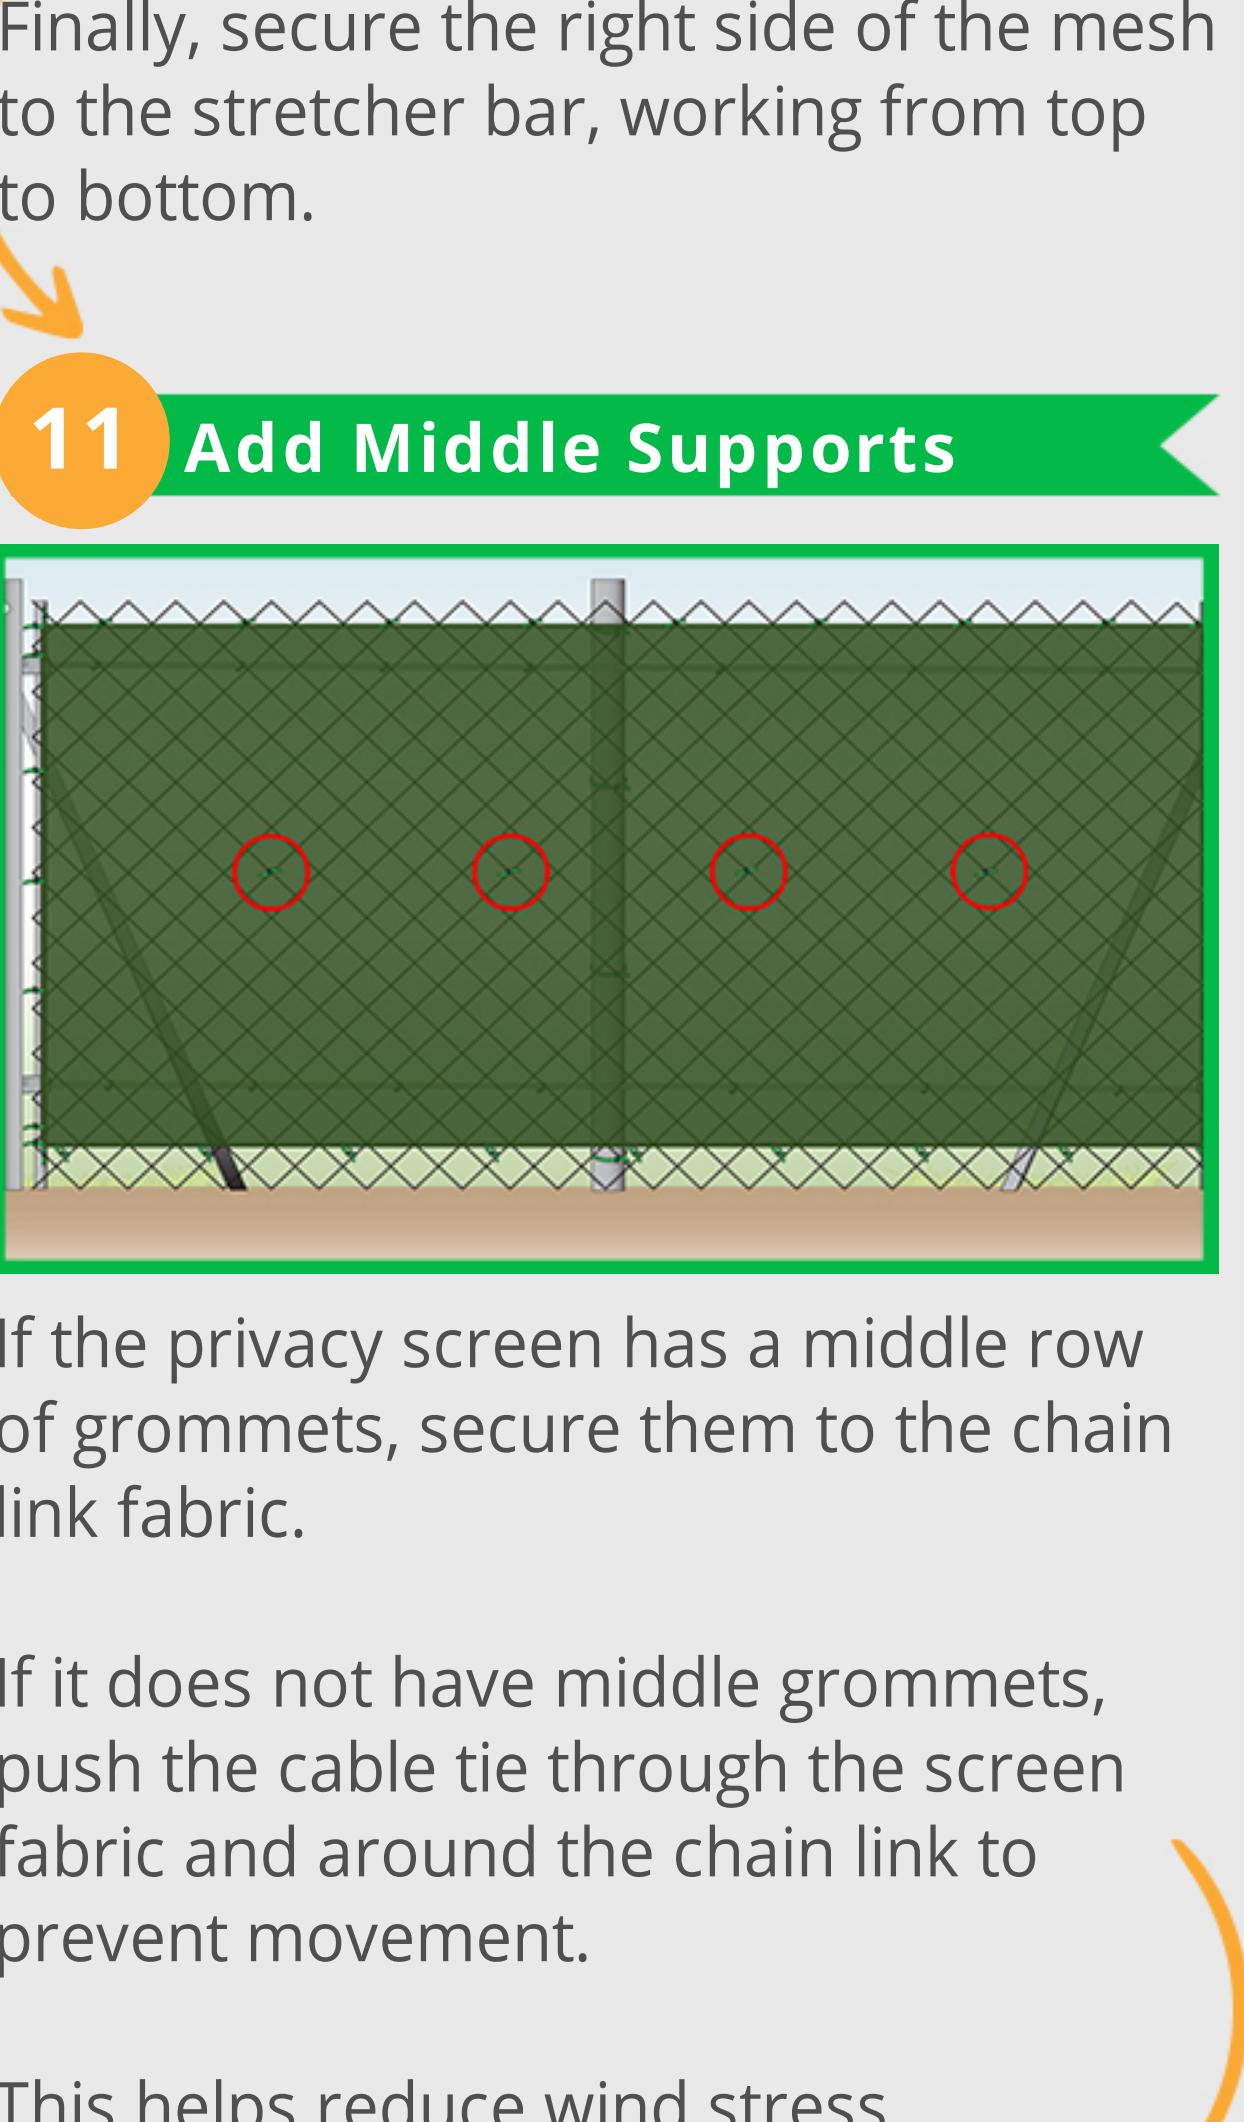

Cut off any excess cable ties with wire cutters to finish the installation.

13 Finish and Protect

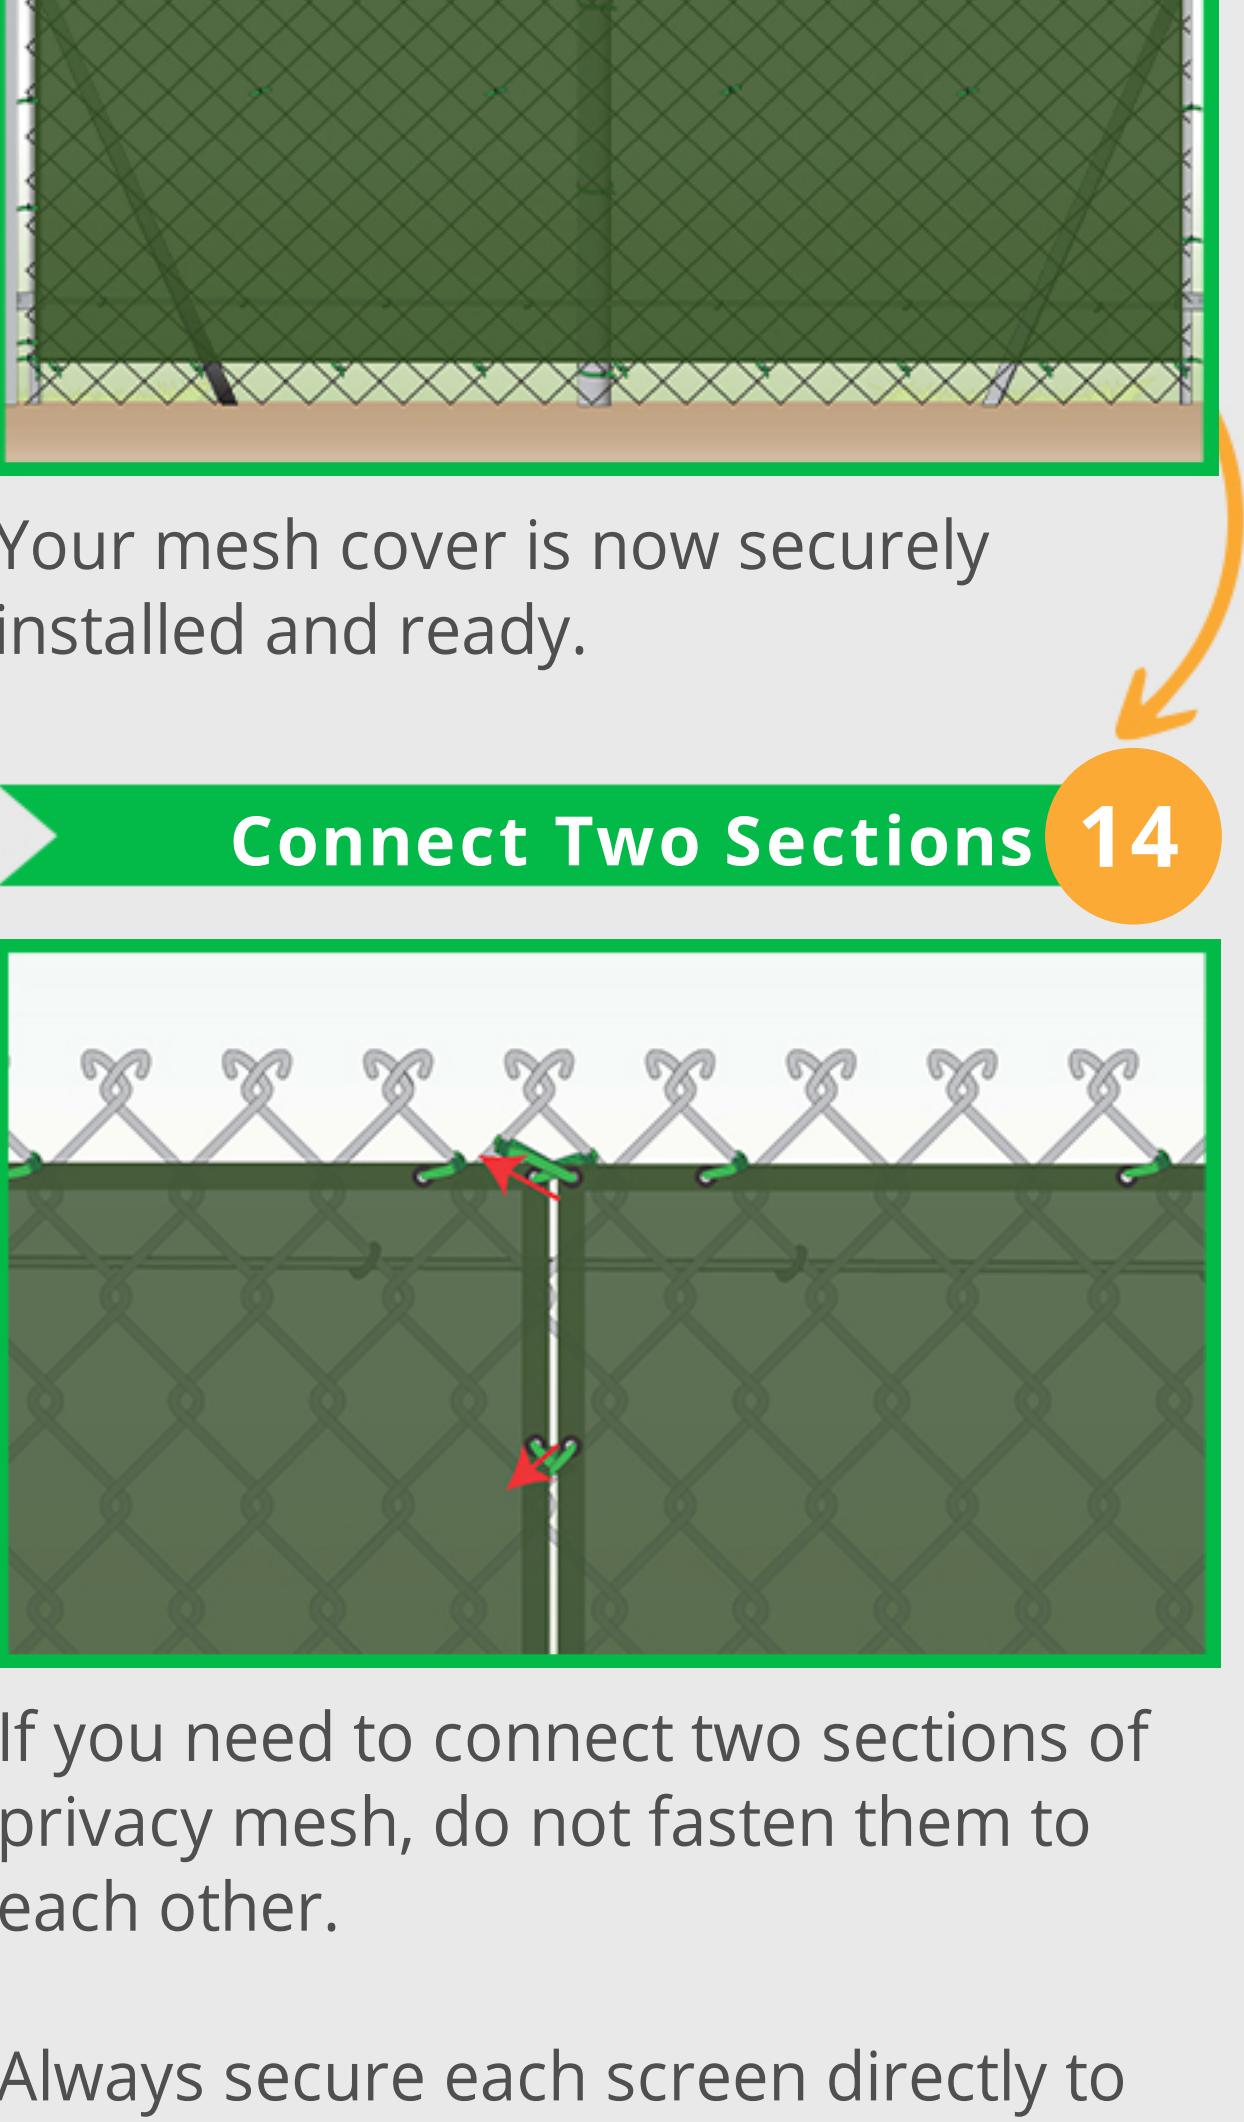

Your mesh cover is now securely installed and ready.

14 Connect Two Sections

If you need to connect two sections of privacy mesh, do not fasten them to each other.

Always secure each screen directly to the chain link fabric, never mesh to mesh.