BADGER PROOF FENCE INSTALLATION
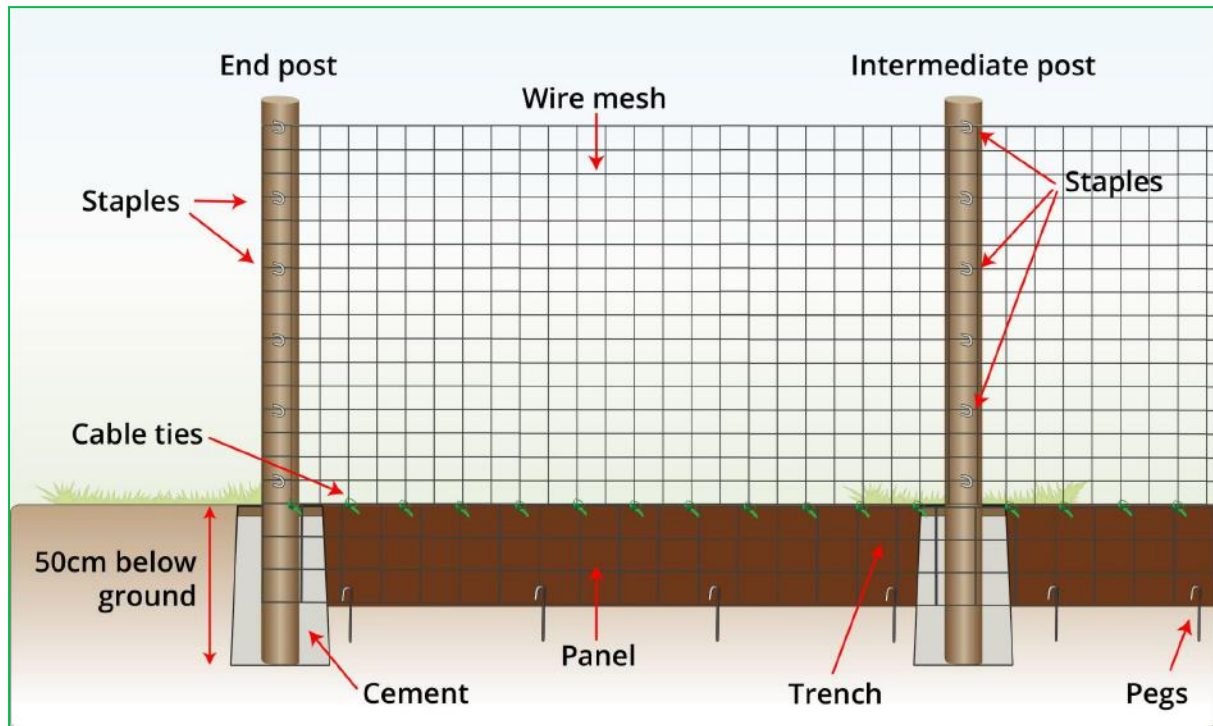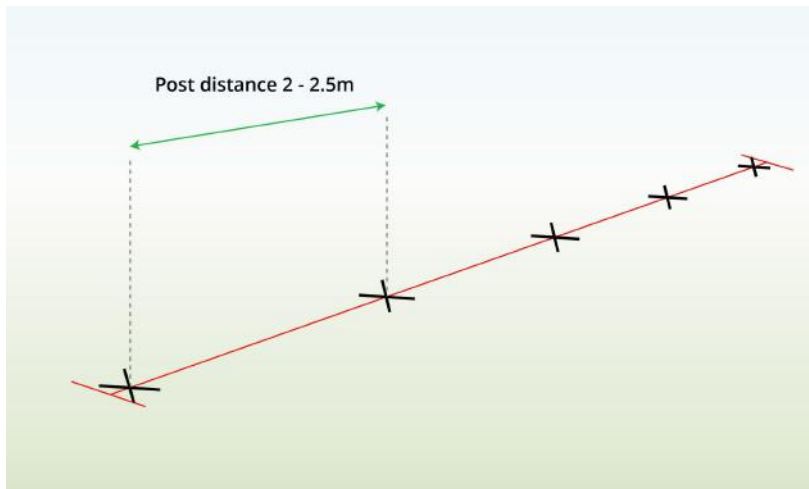## With Wire Mesh Fencing

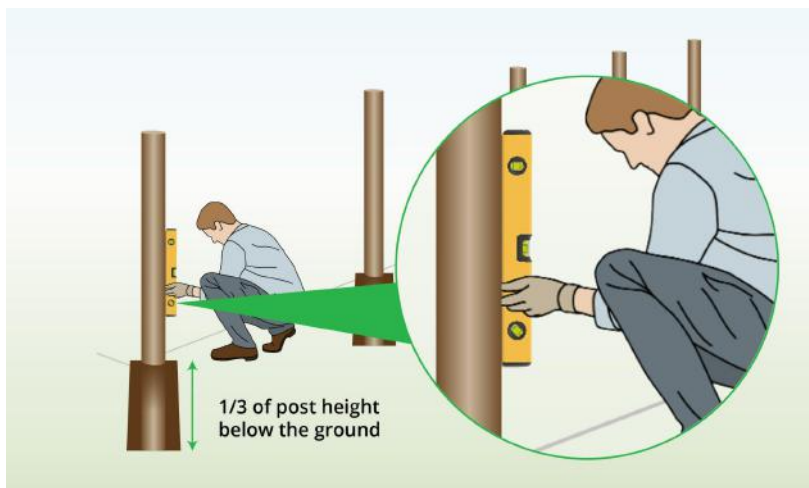**THINGS YOU'LL NEED**

- Wire mesh
- Wooden posts
- Panels
- Pliers
- Hammer
- Staples
- Cable ties
- Pegs
- Spade
- Cement (optional)

INSTRUCTIONS

Post distance 2 - 2.5m

Step 1: Mark the Post Location

Indicate the positioning of the posts, ensuring a spacing of 2-2.5m between each one.

1/3 of post height below the ground

Step 2: Dig Holes

Dig a hole for placing the post, making sure that its depth is approx. one-third of the post's length.

Use a spirit level to ensure the posts are perfectly aligned vertically.
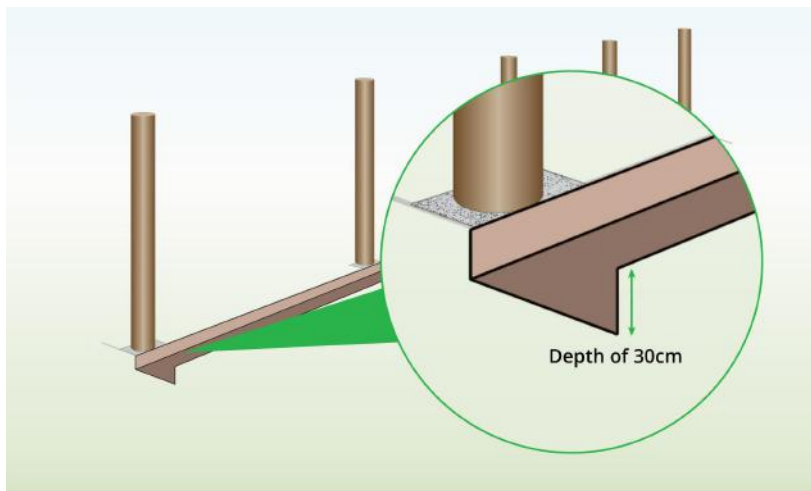

1/3 of post height below the ground
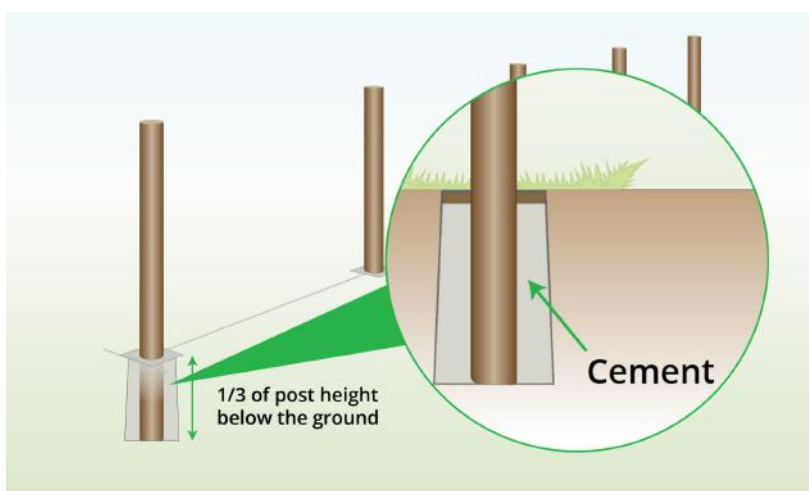
Cement

Step 3 (Optional): Cement Posts In

Pour concrete into the holes, then place the posts securely into the concrete.
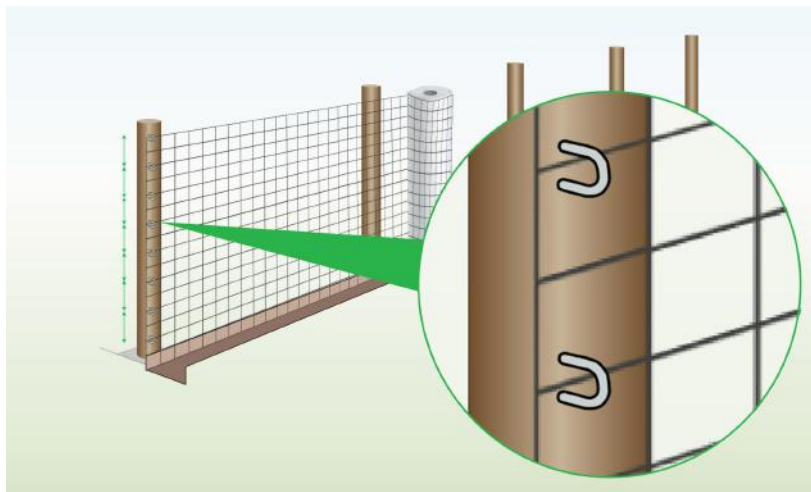
Step 4: Dig a Trench

Dig a trench parallel to the fence line for the netting, making sure it reaches a depth of 30cm.
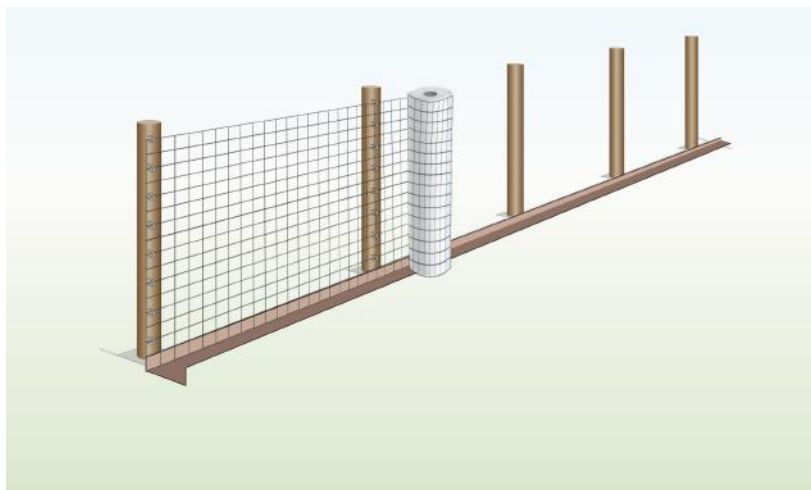

Step 5: Secure Mesh to End Post

Roll out enough netting to cover the space between the first two posts.
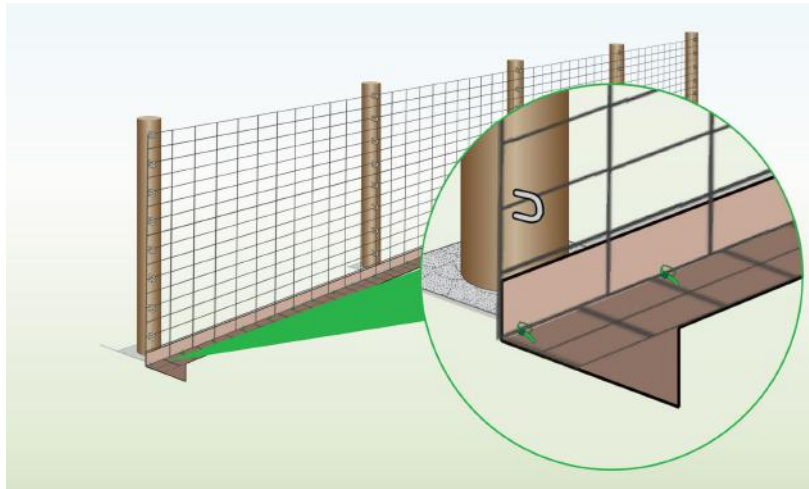
Secure the mesh using staples or cable ties at intervals of 15cm.

Step 6: Secure Mesh to Posts

Secure the remaining section of the mesh by following the procedure outlined in step 5.
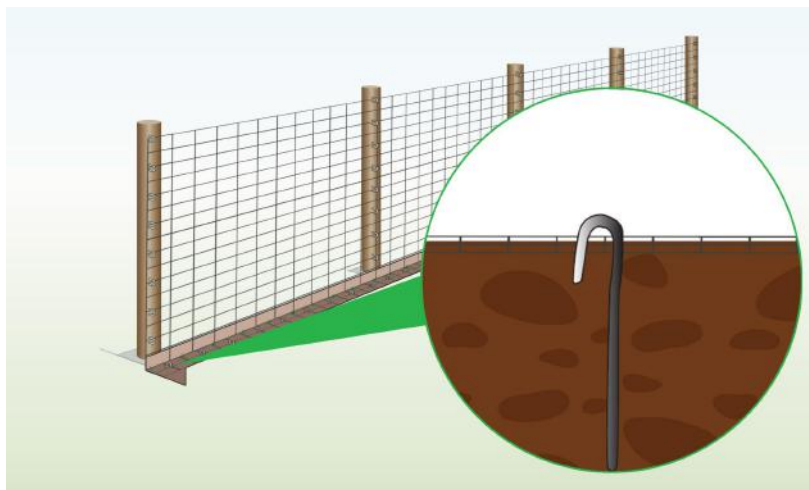
Step 7: Attach Panel to the Mesh

Once you have finished securing the mesh to all the posts, cover the bottom of the trench with a piece of a panel, then attach the wire mesh to the panel by using cable ties.
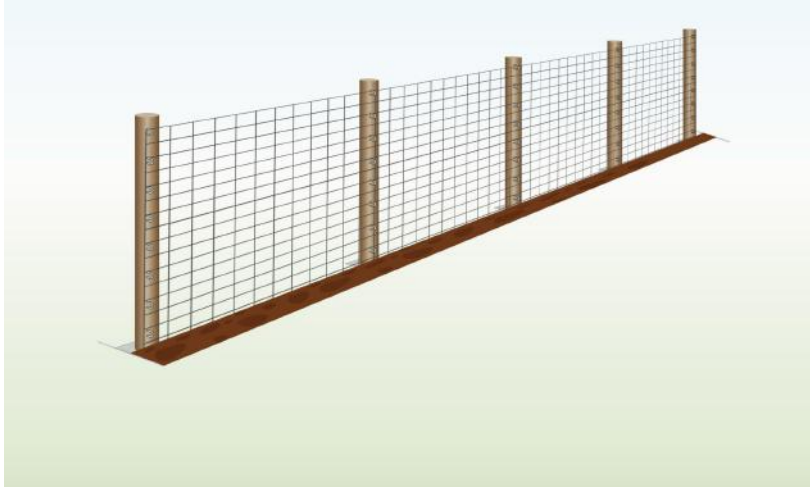
The panel will overlay the bottom of the trench on the exterior of your fence.

Step 8: Secure the Flap to Ground

Secure the flap to the ground by using pegs.

Secure it at the 90-degree angle and at the outer edge of the lip, repeating this every 60cm.

Step 9: Cover the Trench

Cover the outer flap by placing a layer of soil or mulch over it.

Optional: Enhance security against digging by adding a layer of concrete into the trench.